



IN220800478V02\_UK

03-0026\_03-0027\_03-0045\_03-0046



**30L/42L/50L**  
**Sensor Dustbin**



**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# Operational Manual

## Sensor Dustbin Operational Man



| Item No. | Capacity | Dimensions   | Power (AD/DC adaptor) |
|----------|----------|--------------|-----------------------|
| 01       | 30L      | Ø30.5x51.5cm | 4pcs of #AA batteries |
| 02       | 42L      | Ø30.5x68cm   | 4pcs of #AA batteries |
| 03       | 50L      | Ø30.5x81.5cm | 4pcs of #AA batteries |

## Safety Cautions

※ Before using, please carefully read the safety checkpoints

### Related signs

※ For the safety of you and others, please abide by the safety caution checkpoints.



Caution

Injury may be caused or the dust-bin may break down by wrong operation

### Example of signs

■ Signs are used to indicate and explain the items you must abide by



This means forbidden



This means you must do it

※ Please remember the points after you read them.



### Caution



Not to be flushed with water because of the electric and electronic components. Can be wiped with wet wipes on surface.



Avoid direct casting of sunshine on the induction receiver window



During the opening process of the cover, don't press the cover with force.



Dismantling, repair and alteration of the product are absolutely



When batteries are going run out, please replace with new ones instantly




Don't put anything on the dust-bin cover

## Product Introduction

Most dustbins for sale in the market need your hand or foot to press on the cover to operate it. This new infrared induction dustbin doesn't require this. The cover will automatically open & close so it's very simple to use. When you put your hand or an object close to the induction window (at a distance of about 15-25cm) the cover will open automatically. After you drop the trash in the bin, the lid will close automatically. The product adopts a photoelectric technique, it has stable performance, long use and power consumption.

## Parts

### ● Appearance

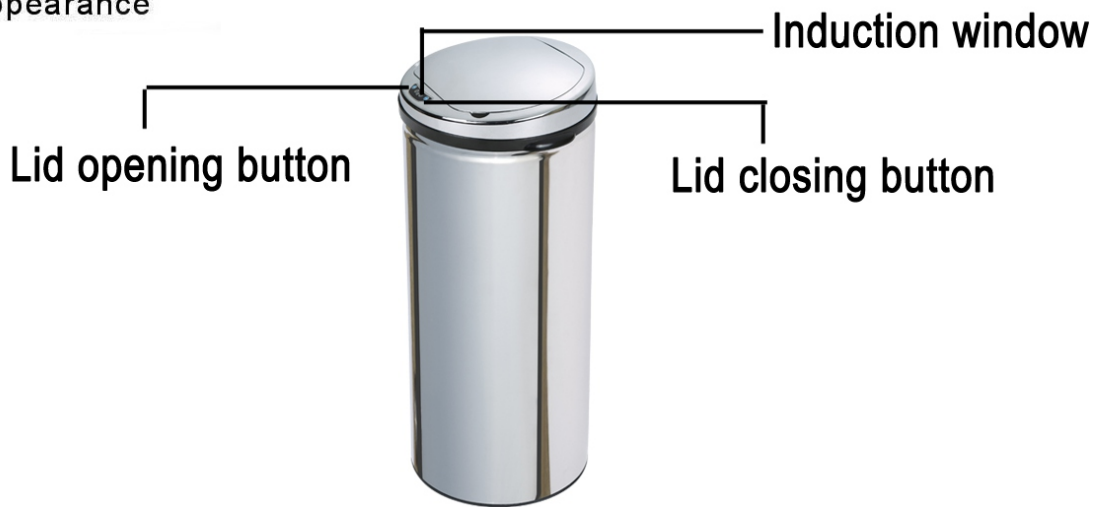

## Operation Instruction

- (1) Open the battery cover at the bottom of the lid and insert 4pcs#AA batteries according to the correct polarity then close the battery cover.
- (2) Turn on the power switch on the rear cover, then the indicator will turn red for 3 seconds (approx). When the indicator twinkles every 3 seconds, it means the electronic circuit is waiting in a normal status.
- (3) When you need to toss the garbage into the bin, simply hover your hand above the lid within 15-25cm and it will open. The lid will then close after 5 seconds of inactivity. The cover will keep open if your hand or object stays in the induction area.
- (4) When the dustbin is full, press the "open" button at the induction window to keep the lid open. This is in order to deal with the frequent switch of the dustbin. Press the "close" button to close the lid and then the circuit resumes its automatic induction function.
- (5) When the dustbin is inactive, the indicator twinkles red every 3 seconds. When the cover is open, the indicator is green. When the cover is closing, the indicator is red. When you use the manual open-cover function, the indicator twinkles green every 3 seconds.
- (6) If the indicator twinkles yellow every 3 seconds, this means the batteries are going to run out. If the dustbin is opened and closed approximately 20 times per day, the battery life is 3 months (approx).



1. The lid will close automatically after 5 seconds of inactivity.
2. If you press the "open" button to open, the sensor bin will not work, you need to press "close" button to reset

If you have any questions, please contact our customer care center.  
Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:  
MH STAR UK LTD  
Unit 27, Perivale Park,  
Horsenden lane South  
Perivale, UB6 7RH  
MADE IN CHINA

