

Guide Book

- 2.4G remote control
- Light control switch
- Power display
- Horn sound
- High and low speed
- Forward and backward





WARNING: The toy is to be assembled by an adult. In unassembled state contain potentially hazardous sharp points, sharp edges and small part, so please keep out of baby's reach

Name

Battery

Speed

Charger

Suitable age

Product size

Loading capacity

Charge/Use time

Remote control

12V4.5A*1

30kg

3-5 km/h

AAA1.5V

parameters shall be subject to the actual sample.

charge 8-12h, use 45min

Input: 120-240V Output: 12V 500mA

The above parameters are selected by the customer, and the specific



Warning: Not to be used in traffic.

If you have any questions, please contact our customer care center.Our contact details are below:




0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS: MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH MADE IN CHINA

Parts List:(Name and Quantity)

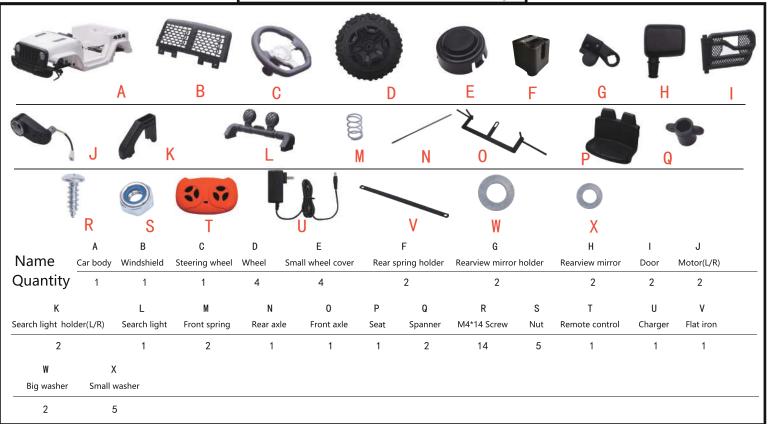



Remote control function and explaination

(4)

(5) Forward/backward

6 Horn sound

⑦ Charging hole

• Do not swift forward/backward button when car is driving, or will damage the moto

Function

• Remote control can be used normally when battery assembled.

• Remote control should be used under adults supervision.

Button function


Power display

② Light control

(4) Power

3 High/low speed

• Remote control is prior to man control.

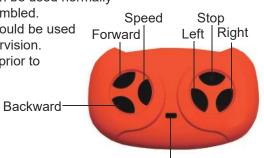


Light indicator

How to adjust R/C frequency: Long press forward and backward

button for 3 seconds, and the speed indicator flashes. Then turn on the powe, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retr

Remote control battery operation

- Take off the battery cover. Put two AAA1.5V remote c battery in with right polarity.
- New and used batteries can not be used mixed.
- Do not insert batteries into wrong polarity, or will be sh
- Non-rechargeable batteries can not be recharged. Exh batteries should be replaced by adults.
- The exhausted battery must be handled and operated | by adults only. Do not be played by children.

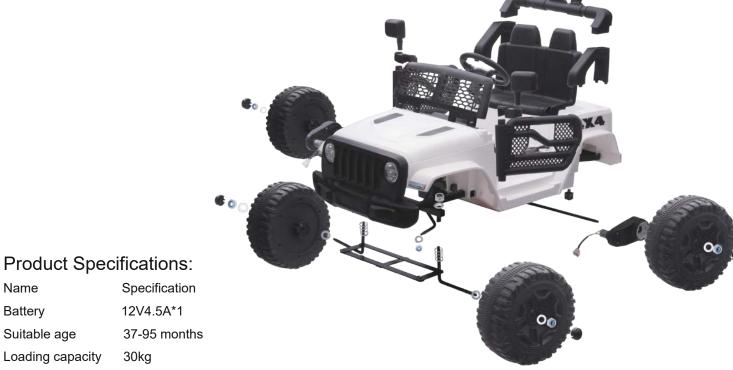

Installation Order Diagram

1. Front axle and front spring assembly

First, put the flat iron on the front axle. Put 1pcs front spring to each side of square tube. Then insert the front axle into the hole of square tube, add 1pcs washer and use spanner to tighten the nut. The same way for the other side. Direction lever should be passed through the hole of front axle, then add 1pcs small washer and use spanner to thighten the nut.



2.Front wheel assembly

Add 1pcs big washer, 1pcs wheel, 1pcs small washer step by step, use spanner to tighten the nut. Finally put the small wheel cover on. The same way for the other side.



3. Rear spring and rear spring holder assembly

Insert the rear spring holder into the reserved place on the car body, use 8pcs M4*14 screw to tighten.



4.Rear axle and motor assembly

Insert the rear axle through the holes of rear spring holder. Add 1pcs motor, 1pcs wheel, 1pcs small washer step by step, use spanner to tighten the nut. The same way for the other side.







5.Door and rearview mirror holder assembly

Insert the door into the reserved place on the car, then insert the rearview mirror holder into the reserved place on the car and door. Use 2pcs M4*14 screw to tighten. The same way for the other side.





6. Steering wheel assembly

Unscrew the steering wheel, insert steering wheel into the direction lever, use screw and nut to tighten.





7. Windshield, rearview mirror, search light holder, search light assembly


Insert the windshield, rearview mirror, search light holder into the reserved place on the car. Then insert tinsert the search light into the search light holder.





8. Motor line and battery line connection

Connect the motor line correctly.
Connect the red battery line to the red terminal.

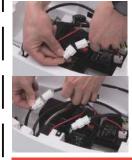



9.Seat assembly

Insert the seat into the reserved place on the car, usd 2pcs M4*14 screw to tighten.

10.Switch the remote control and manual switch





1. Remove the screw from the switch cover by a screwdriver.
2. Open the switch cover, switch the remote control and manual switch. Under remote control mode, the car can only be operated by remote control, the foot can not be operated. Under manual mode, the car drive can only be operated by foot, remote control can not be operated.

Warnings

For children's safety, please read these carefully.

Assembly and adjustment must be done by adults, keepchildren away.

Keep children under 36 months away from small parts.

Safe belt is a must when children playing. Do not be close to fire.

Adult must teach how to play it and never leave children alone for playing.

Do not stand up or play when children are stepping on foot pedal.

Battery must be charged by adults only. Please charge it first before use.

Keep children away from plastic bag, or suffocation may occur.
Only use spare parts which provided by manufacturer.

Charger is not a toy for playing.

Maximum loading capacity is 30KG. Do not overload. Suitable age: 37-95 months.

Safety use

Do not play in the street, road, slope or ditch.

Do not change the line or add electric device to the car. Play the car in the dry area, not wet. Keep away from fire,

One or two riders one time only. Do not overload.

Maximum capacity is 30KG.

Turn power off if no use. If long time no use, unplug battery line.

Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.

Charging notification

or may damage the line.

For the first use, please charge 8-12 hours, or will damage the battery.

Plug charger DC line into charge hole first, then plug charger into socket. Car can not be played when it charging. Every time it charged, do not charge more than 20 hours. It is normal that charger and battery warm (under 60°) during charging.

Do not charge if plug is wet, or will occur short-circuited.
Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.

If long time no use, please charge 1 time per month at least.

Charging steps are as follows:

Step 1: The charging hole is on the multi-functional board. Step2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.





Warning: Car must be charged by adults only. Car is useless during charging

Maintenance and Service

Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.

- Use lubricating oil to care iron parts. Keep car away from fire and sunshine. Park it on the even place, not reversal or gradient.
- Park it indoor and cover it with waterproof cloth.
- Keep car away from fire, like stove or heater, or plastic may melt.

Keep away from flammable things, or may occur fire accident.

- Charge it after use and must be done by adults only. If long time no use, please charge it 1 time per month, in order to maintain battery.
- Clean the vehicle with a dry cloth only. Do not use chermical solvent to wipe plastic parts. Do not wash it with water or play it when raining or snowing. Water will damage motor, electric system or battery.
- Please turn power off after each use.
- Only use charger provided by manufacturer.
- Do not change car's structure or electric line. Check job request some skills or under specialist's guidance.