

IN221101035V03_UK

824-061V70_824-069V70



AIR COOLER



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS


- 1. Ensure the voltage and frequency matches the voltage on the appliance rating label.
- 2. Before using, ensure the power cord and plug work properly. If the power cord or plug is damaged, it must be replaced by the manufacturer or qualified persons to avoid a hazard.
- 3. Do not cover the outlet and inlet of the air cooler.
- 4. Keep the wind inlet away from walls, curtains and other obstacles, as they could block the air flow and affect the performance.
- 5. Do not cover the outlet. Choose a socket which exceeds a 10A current. Do not connect other appliances to the same socket.
- 6. Do not place the air cooler on sloped or uneven surfaces.
- 7. Do not use the air cooler outdoors, next to the bath, shower or pool.
- 8. When the appliance is on the 'Cool' (humidifying) function, the water level must be less than 'MAX' and more than 'MIN'.
- 9. When filling the water tank, fo not tilt or shake the appliance.
- 10. Never touch the plug with wet hands this is an electricution hazard,
- 11. When the appliance is on, never insert hands or objects into the appliance.
- 12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they remain under supervision or follow instructions given by a person responsible for their safety.
- 13. Children should be supervised to ensure they do not play with the appliance.
- 14. Turn off the power before unpluging the unit. When unplugging, do not pull the power cord this could result in a fire or electric shock.
- 15. When not in use, unplug the appliance.
- 16. Do not place items on top of the air cooler.

PARTS



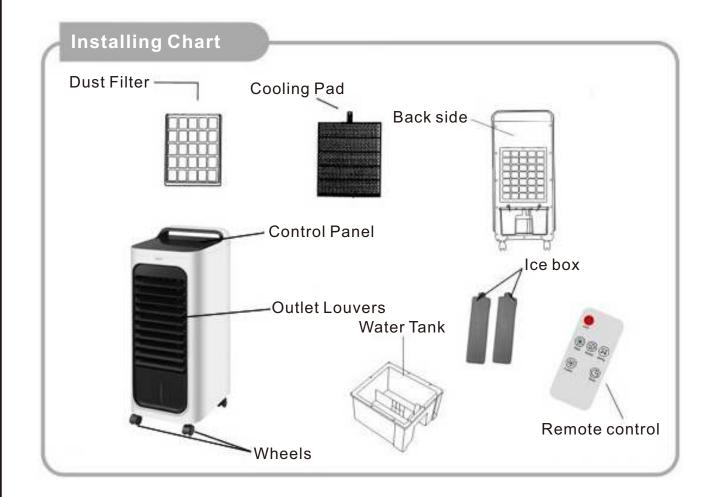

CONTROL PANEL

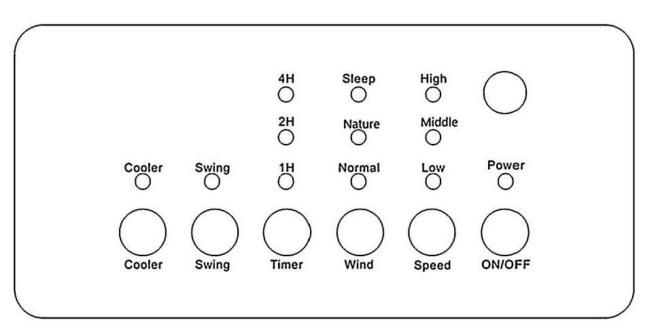

- 1. ON/OFF: Press this button on the control panel or remote control to turn the unit on. It will start at a low speed and normal wind. To return to standby mode, press the button again.
- 2. Speed: Wind speed has three levels low, mid and high. Each time this button is pressed, the indidicator will light to show the speed level.
- 3. Wind: There are three types of wind normal, nature and sleep. Each time this button is pressed, the indicator will light to show the wind type.

- 4. Timer: Press this button to set a timer between 1-7 hours. Once the time is up, the appliance will switch to standby. Each time the button is pressed, the time increases by one hour the indicator will light on the screen. To cancel the timer, press the button until the indicator turns off.
- 5. Swing: When this button is pressed, the air control blades are activated and the swing indicator is on air will flow to the left and right. Press the button again to stop the oscillation. The control blades direct the air flow up and down it must be set manually.
- 6. Cooler: When this button is pressed, the pump will take water from the tank and pour it onto the cooling pad. This will absorb the heat of the water and the evaporated water is blown out by the fan. The cool breeze will drop the ambient temperature, creating a relaxing and cooling effect.

HOW TO FILL WATER TANK


Take out the tank from the bottom of the air cooler (at the back) and fill with 1/3 of water.

- Pay attention to the water level indicator when filling.
- The water level of tank must be less than 'MAX'.
- The water level of tank must be more than 'MIN'.
- For cooler wind, place ice boxes (or ice) into the tank.

HOW TO USE ICE BOXES

- Ice boxes will reduce the water temperature, so the air is cooler from the appliance.
- Place ice boxes, filled with water, in the freezer.
- Once frozen, take out the ice boxes.
- Take out the tank and place the ice box inside.
- There are two ice boxes, so you can rotate them and have continuous cool air.

CLEANING

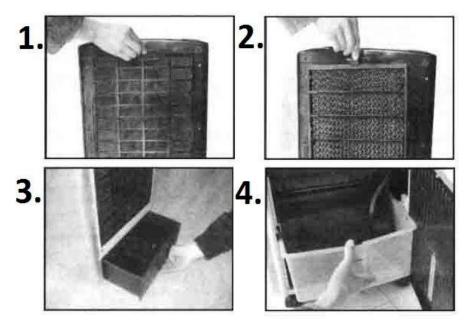

1. Clean air filter

Take out the plug and pull the holder of the air filter. Once the filter is out, clean with a neutral cleaner and soft brush. Next, rinse with water, then place the air filter back into the appliance.

2. Clean the wet curtain paper

Take out the plug and remove the air filter, then remove the wet curtain paper. Clean the wet curtain paper with a neutral cleaner, soft brush and water, then place it back into the appliance.

Important!

To avoid leaks, the wet curtain paper must be installed correctly.

3. Clean water tank

Remove the plug, take the tank out and wash the residue inside with a towel and neuatural cleaner. Next, rinse the tank with water, then place it back into the appliance.

4. Clean the housing

Wipe the housing with a neutral cleaner and soft cloth.

Important!

Before cleaning, always turn off and unplug the appliance.

5. Clean the water pump:



1.Remove the foam around the pump



2. Secure the pump to the trough at the bottom of the tank



3. Rotate the tablet onto the water pump to secure the water pump

TECHNICAL SPECIFICATION

Power: Cooling:80W Voltage: 220-240V Frequency: 50-60 Hz



In accordance with the provisions of the Act of 29 July 2005 on waste electrical and electronic equipment, it is forbidden to disposal wasted equipment marked with crossed out wheelie bin symbol.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycli.

If you have any questions, please contact our customer care center. Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS: MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH MADE IN CHINA

