

IN240400276V01\_UK

820-302V70



( )

**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.** 

**FR\_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.** 

ES\_IMPORTANTE, LEAY GUARDE PARA FUTURAS REFERENCIAS.

PT\_IMPORTANTE, RETER PARA REFERÊNCIA FUTURA: LEIA ATENTAMENTE.

**DE\_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.** 

IT\_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.

# EN

Thank you for using our products. Please read this instruction manual carefully before operation!

# I . Product Appearance



### II. Main Technical Date

Model	Rated Voltage	Rated Frequency	Rated Power
HY-200CR	220-240V	50Hz	2000W

### III. Precaution Items For Safe Use

- 1) Please read the product manual carefully before using the heater.
- 2) Insert the plug into the socket(requirements for socket and power cord: AC 220-240V, 50/60Hz,≥10A). The heater must not be located below a fixed socket.
- 3) Please operate according to the instructions of the manual. Any unrecompensed operation can cause fire, short circuit and personal injuries.
- 4) Unauthorized extension of power cord is not allowed to avoid fire caused by overheating of the extension part.
- 5) In order to prevent short circuit, fire or damages to the appliance, never insert any article into the heater or block the cooling net.
- 6) Since the heater can generate heat, don not touch the hot surface with uncovered human body to prevent burns. Grab the plastic handle at the rear to move the heater when necessary. In case that children, animals or lame people and people lacking self-discipline are on the spot and left unattended, avoid using the appliance.
- 7) Never use the heater outdoors.
- 8) Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool
- 9) Do not use the appliance in area where gasoline, paint and flammable liquid are used to stored.
- 10) Never cover anything on the heater during use.
- 11) To avoid current overload, do not share the use of a single socket with other appliances.
- 12) The heater must not be located below a fixed socket.
- 13) If the power cord is damaged, it must be replaced by the manufacturer or its maintenance agent or a similarly qualified person in order to avoid potential hazards.
- 14) Never use the product with automatic power-on programmer, timer or other types of installations.
- 15) In case of product failure, please contact after-sales service agent for inspection and repairing. Unauthorized disassembling and replacement of parts are not allowed.
- 16) The product shall be packed properly to prevent it from dust and kept in a well-ventilated, dry place.

#### CAUTION:


This appliance is not intended for use by persons (including children) whit reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

#### IV . How to install

## Free standing installation:

First, take the heater out the package and place it upside down on soft surface. Second, take four screws from the accessories (two screw for each castor, parallel the bevel of castor bracket to the bevel of the heater, if installed reversely, the screw cannot be revolved in.) and aim them at the taps to tighten them. Third, Then just upright the heater and put it into use. You may refer to the following figure.

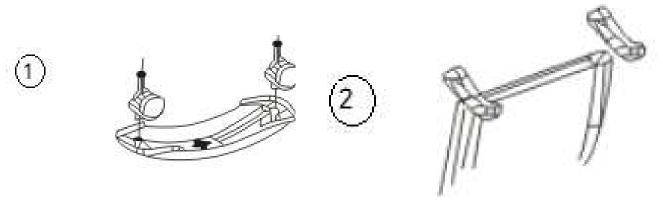

## **OPERATION**

Press ON/OFF startup to work in low mode, non-temperature setting state, the temperature indicator is not on, and the ambient temperature is displayed.

Press the heating adjustment key to switch gears, switch between high and low, the temperature indicator is off, and the ambient temperature is displayed.

Press the temperature setting button to set the temperature. The low-grade controllable temperature ranges from  $18^{\circ}\text{C}$  to  $24^{\circ}\text{C}/$  the high-grade controllable temperature ranges from  $25^{\circ}\text{C}$  to  $30^{\circ}\text{C}$ . In the temperature setting state, when switching between high and low grades, the corresponding setting temperature will change (for example, the default setting temperature from low-grade to high-grade is  $25^{\circ}\text{C}$ , and the default setting temperature from high-grade to low-grade is  $18^{\circ}\text{C}$ ). When the actual temperature is greater than the set temperature, turn off the heating output; when the actual temperature is less than or equal to 2 degrees of the set temperature, turn on the heating output; Whether it is low grade or high grade, press 00 again after (low grade  $24^{\circ}\text{C}$ )/ (high grade  $30^{\circ}\text{C}$ ) to cancel the setting temperature, and the heating function continues to work. When setting the temperature, the set temperature will be displayed for three seconds after setting the temperature, and the temperature indicator will be on after three seconds, and the ambient temperature will be displayed.

On time key, time  $0.5h \sim 12H$ , each time press the key plus 0.5 hours, cycle accumulates the end of the shutdown and beep; After setting 12 hours, press the button again and the 000 display will disappear after 3 seconds. The timing is cancelled and the timing indicator is off. When the timer shutdown function is enabled, the timer indicator is steady on.

Remote control function, key operation (switch, temperature setting, timing, heating adjustment); Same function as the four keys on the control panel.

If you have any questions, please contact our customer care center.

Our contact details are below:



001-877-644-9366



customerservice@aosom.com

Imported by Aosom LLC 27150 SW Kinsman Rd Wilsonville, OR 97070 USA MADE IN CHINA

If you have any questions, please contact our customer care center.



Our contact details are below:



**416-792-6088** 



customerservice@aosom.ca

Imported by Aosom Canada Inc. 7270 Woodbine Avenue, Unit 307, Markham, Ontario Canada L3R 4B9 MADE IN CHINA

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle. Nos coordonnées sont les suivantes:



**416-792-6088** 



customerservice@aosom.ca

Importé par Aosom Canada Inc. 7270 Woodbine Avenue, unité 307, Markham, Ontario Canada L3R 4B9 Fabriqué en Chine

Si tiene alguna pregunta, comuniquese con nuestro Centro de Atención al Cliente.

Nuestros datos de contacto son los siguientes:

**~** 0034-931294512

atencioncliente@aosom.es

IMPORTADOR:

SPANISH AOSOM, S.L.

C/ROC GROS, Nº 15. 08550, ELS HOSTALETS DE BALENYÀ, SPAIN.

B66295775

WWW.A0S0M.ES

**HECHO EN CHINA** 

Se tiver alguma dúvida, por favor contacte o nosso Centro de Atendimento ao Cliente.



Os nossos dados de contacto são os seguintes:



0034-931294512 (SEG-SEX DAS 7:30H ÀS 16:30H)

∞info@aosom.pt.

IMPORTADOR:

SPANISH AOSOM, S.L.

C.ROC GROS N.15, 08550. ELS HOSTALETS DE BALENYÀ

WWW.AOSOM.PT

Wenn Sie Fragen haben, wenden Sie sich bitte an unser Kundendienstzentrum.



IT

Unsere Kontaktdaten stehen unten:



📆 0049-0(40)-88307530 📈 service@aosom.de

ADRESSE DES IMPORTEURE:

MH Handel GmbH


Wendenstraße 309

D-20537 Hamburg

Germany

IN CHINA HERGESTELLT

 In caso di dubbio, si prega di contattare il nostro centro assistenza clienti.



**6** 0039-0249471447

clienti@aosom.it

IMPORTATO DA:

AOSOM Italy srl

Centro Direzionale Milanofiori

Strada 1 Palazzo F1

20057 Assago (MI)

P.I.: 08567220960

**FATTO IN CINA** 

If you have any questions, please contact our customer care center.





**(3)** 0044-800-240-4004

enquiries@mhstar.co.uk

**IMPORTER ADDRESS:** 

MH STAR UK LTD

Unit 27, Perivale Park,

 
Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

UK Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.





🔪 aosom@mhfrance.fr

Importé par:

MH France

2, rue Maurice Hartmann

92130 Issy-les-Moulineaux

France

Fabriqué en Chine

3

