



IN240600236V01_UK

800-207V70



WATER KETTLE



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

SAFETY INSTRUCTIONS

General

- Please read these instructions carefully and keep for future reference.
- Follow all instructions when using this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Repairs must be carried out by a qualified electrician. Never try to repair the appliance yourself.

Electricity and heat

- Before use, ensure the mains voltage matches the rating plate of the appliance.
- Make sure you always use an earthed wall socket to connect the appliance.
- Before moving the appliance or when not in use, remove the plug from the mains.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Check the appliance's power cord regularly to make sure it is not damaged. Do not use the appliance if the power cord is damaged – it must be replaced by qualified personnel.
- Certain parts of the appliance may get hot – do not touch to prevent burning yourself.
- Ensure there is space on top and all sides of the appliance, allowing heat to escape and preventing the risk of fire. Keep this appliance away from flammable substances. Never cover this appliance.
- Make sure the appliance, power cord or plug do not touch hot surfaces, such as hobs and naked flames.
- Keep the appliance, power cord and plug away from water.

During use

- Never use the appliance outdoors.
- Place the appliance on a flat and stable surface.
- If not in use and before cleaning, ensure the plug is removed from the wall socket.
- Never allow the power cord to hang over the edge of the draining board or table.
- Make sure that your hands are dry before touching the appliance, power cord or plug.
- Never use the appliance in a humid room.
- Never immerse the appliance, plug or power cord in water or other liquid.
- Do not pick up the appliance if it falls into water. Remove the plug from the wall socket immediately – do not use the appliance again.
- Only use the base supplied with the jug kettle. Never use the base for other purposes.
- Remove the jug from the base, then fill with water from the tap. Never fill the jug above the 'max' level.

- Do not switch on the appliance before you have filled it with water. Fill only with cold water.
- The jug's lid must remain securely closed whilst the appliance is in use.
- Never open the lid when the water is still boiling.
- Use the appliance only to boil or heat water. Never use it for other liquids!
- Fill the jug kettle with at least 0.5 litres of water.
- Allow the appliance to cool to room temperature before storing.
- This appliance must not be used with an external timer or remote control.

Operation

The appliance is intended only for domestic use, not for professional use.

Feature

1. Top lid
2. Spout
3. Kettle body
4. Base
5. Handle
6. Water level indicator
7. On/off switch with pilot light



Before using for the first time

Remove possible manufacturing residues by boiling three full kettles of water. Dispose this water.

Tip: You can use vinegar or special descaling agents for the first time.

Use

1. Turn the jug, so the spout faces away from you.
2. Press the button to open the lid.
3. Fill the jug with the required quantity of water (at least 0.5 liters, and a maximum of 1.7 liters). Never fill the water boiler over the “max”, otherwise the hot water can spill out.

ATTENTION

Be cautious – do not spill water on the base.

- Release the button to open the lid.
 - Place the jug on the base, then insert the plug in the wall socket. Push down the ON/OFF switch. The ON/OFF pilot light will illuminate.
 - The jug kettle is now switched on – the water will begin to heat. The jug kettle switches off automatically a few seconds after the water has come to the boil. The on/off pilot light will turn off.
 - Remove the jug from the base by the handle and pour the water out.
- Be cautious – do not touch the boiling water. It can cause serious burns.
- If you want to heat water without boiling, you can switch off the kettle before boiling point.
 - When finished using, remove the plug from the wall socket.

Overheating safeguard

The jug kettle is fitted with an overheating safeguard. This will switch off the kettle if it is used without (sufficient) water. Allow the kettle to cool down for at least 10 minutes before using again.

Cleaning and maintenance

- Remove the plug from the wall socket and allow the appliance to cool.
- Clean the kettle with a damp cloth. Never immerse the appliance in water. Never put the appliance in a dishwasher. Make sure the electrical connections do not get wet.
- If the inside of the kettle becomes severely discoloured, clean it with a damp cloth and a little bit of washing soda. After cleaning, rinse the jug thoroughly.

ATTENTION

- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Before cleaning, make sure the appliance is unplugged and has cooled down.

Descaling

This appliance is equipped with an integral heating element, which prevents limescale.

You do not need to descale this appliance.

However, if you still want to descale this appliance:

1. Remove the plug from the wall socket and allow the appliance to cool.
2. The kettle is fitted with a descaling filter, which must be removed when cleaning.
3. Fill the kettle with a vinegar solution to the maximum level, then boil.
4. Leave the kettle with the vinegar solution to stand for a couple of hours.
5. Empty the kettle, fill with clean water to the maximum level and boil. Empty the kettle. Repeat this process twice.

*** Never use ammonia or other products to descale the appliance. Only use a vinegar solution or special descaling agents, which is available from retailers.**

Technical details

Model No.: 800-162V70

Power consumption: 2520-3000W

Mains Voltage: 220-240V ~ 50/60Hz

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

