



IN240600239V01_UK

800-211V70



WATER KETTLE TOASTER SET



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

TOASTER

DESIGN

1. Cancel button
2. REHEAT button
3. Crumb tray
4. Display
5. Level selection button
6. Defrost button
7. Lever



SAFETY INFORMATION

- Please read these Operating instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating instructions must also be handed over.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating plate.
- Do not put the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, unplug the appliance immediately and have it checked by a qualified person before using it again. Non-observance could cause a fatal electric shock!
- Never attempt to open the housing yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cord and the plug regularly for any possible damage. If the cord or plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug are damaged. In the case of damage, take the appliance to an electrical repair shop for examination and repair if necessary.
- Never attempt to repair the appliance yourself. This could cause an electric shock.
- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- For extra protection it is possible to fit the electric household installation with a fault current breaker with a rated breaking current of not more than 30mA. Ask your electrician for advice.
- Make sure that there is no danger that the cord or extension cord may inadvertently be pulled or cause anyone to trip when in use.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and/or plug may occur.

- This appliance is not suitable for commercial use nor for use in the open air.
- Never leave the appliance unattended while it is in use.
- Children should be supervised to ensure that they do not play with the appliance. Because they cannot recognize the dangers involved in the incorrect use of electrical appliances.
- Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Danger! Nominal voltage is still present in the appliance as long as the appliance is connected to the mains socket.
- Switch the appliance off before disconnecting from the mains.
- Never use the cord to carry the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a moment.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

SPECIAL SAFETY INSTRUCTIONS

- Caution: Danger of burns! Bread can burn. Do not use the toaster near or below curtains or other combustible materials.
- Do not place in the bread slot (7) any oversized baking utensils and bread wrapped in aluminium foil or plastic foil, because of the risk of burning or electrical shock.
- Bring the toast lever in the up position, before pulling out the plug from the socket.
- Burning hazard: Parts of the unit become very hot during operation. Touch only the handles or buttons.
- Let the unit cool down before removing or putting in any parts.
- Do not try to remove the foodstuff from the unit while the unit is still in operation.
- Do not use any accessories not supplied with this unit!
- This unit is suitable only for toasting bread. Do not heat up any other food with this unit.
- Do not ever put in bread with cheese or other spreads in the bread slot (7).

BEFORE FIRST USE

- Remove all packing material.
- Heat the unit four to five times at the highest setting without bread, in order to burn off residues left during manufacturing process. Ensure proper ventilation while doing this (say, by opening the window).

OPERATION

Toasting function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.
- Push down the toast lever fully, till it latches automatically.
- Select the degree of browning by touch +/- button (1 = light brown, 7 = well done). Default setting is level 4.
- The toaster start to work . All the indicator light will be on. the display will show the toasting level you chosen and the time count down.
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

Defrost function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.
- Push down the toast lever fully, till it latches automatically.
- Touch the Defrost button
- Select the degree of browning by touch +/- button (1 = light brown, 7 = well done). Default setting is level 4.
- The toaster start to work . Defrost button will flash. the display will show the toasting level you chosen and the time count down
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

Reheat function:

- Place bread slices in the bread slot.
- Connect the main plug to a suitable socket.
- Push down the toast lever fully, till it latches automatically.
- Touch the reheat button.
- The toaster start to work . Reheat button will flash. the display will show the time count down.
- The toaster will stop automatically when the set toasting level is reached. The toast lever jumps up. The bread slices are fully toasted.

HOW TO CLEANING THE TOASTER

Your toaster comes with a removable, slide out crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing and emptying the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.

Use a stiff brush to remove any burnt-on crumbs.

Wipe the outside of the toaster with a damp cloth.

Do not use a sharp object or abrasive substance to clean the toaster.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

TOASTING TIME

Toast time (S)								DEFROST(S)							REHEAT(S)
cycle	1	2	3	4	5	6	7	1	2	3	4	5	6	7	
cycle1	90	110	130	150	170	190	210	104	126	149	173	196	219	242	35
cycle2	83	98	108	126	144	162	180	95	113	125	136	157	187	207	35
cycle3	80	93	103	121	139	157	175	92	107	120	131	152	182	185	35
cycle4	78	90	101	118	135	154	172	89	103	118	128	149	179	182	35

TECHNICAL SPECIFICATIONS

Operating voltage : 220-240V~50/60Hz

Power consumption: 920-1080W

CORDLESS KETTLE

FEATURES:

1. Spout
2. Base
3. Lid
4. Lid open button
5. Handle
6. Display
7. Heating indicator light
8. Keep warm indicator light
9. Temperature + button
10. Temperature - button
11. Boil/Cancel button
12. Keep warm button



SAFETY INFORMATION

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments
- The appliance is designed exclusively for private use and for the envisaged purpose.
- This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- Children should be supervised to ensure that they do not play with the appliance. Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliance, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following "Special Safety Instructions".

SPECIAL SAFETY INSTRUCTIONS

- Use only cold water when filling.
- The water level must be between the MAX. and MIN. marks! If the kettle is overfilled, boiling water may be ejected, which might arise a hazard to the user.
- CAUTION-Ensure that the kettle is switched off before removing it from its stand.
- The kettle is only to be used with the stand provided.
- The appliance must not be immersed.
- The appliance can only be used for household only.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

First Use of the Machine

Please read these operating instructions carefully and keep them in a safe place. Before using for the first time, boil fresh water at least twice in the appliance. Use only water without any additives or ingredients.

OPERATION

1. Place the machine on a flat surface.
2. Open the kettle by pressing the unlocking button on the handle. Then fill in some water. The water level can be read off using the water level indicator on the kettle. Please do not overfill the kettle.
3. Close the lid.
4. Place the kettle on the base. When placing the kettle back to the base, 2 beep sound can be heard, display will be on at the water temperature.

Boiling:

Default Mode: Touch “Boil/Cancel” button, there will be one sound and display show the inside water temperature after three blinks, the kettle start to work under “100°C” setting. When reaching 100 degree C, heating light distinguish. Heater stops.

Temperature setting: Hand touch the temperature + or - button for selecting the desired cooking temperature (40/50/60/70/80/90/100 degree C). Then touch the “Boil/Cancel” button to start the boiling. When reaching 100 degree C, heating light distinguish. Heater stops.

Keep Warm:

Hand touch the temperature + or - button to set the keep warm temperature (40/50/60/70/80/90degree C). Then touch the “Keep warm” button. Both heating indicator light and keep warm indicator light will be on. The display show the inside water temperature after three blinks. Kettle start to work. When the water temperature reach the setting temperature, then the kettle will stop work after two sounds and then come into keep warm mood. The heating indicator light will be off.

If the kettle inside water temperature higher than chosen temperature, the kettle will give two sounds and the keep warm indicator light flash. Display show the real temperature. After the water temperature cool down to be chosen temperature, the indicator light will stop flashing and be on . Display show the chosen temperature.

Reminder 1: Keep warm for two hours

Reminder 2: No Keep warm function at 100°C

Switch off

Touch “Boil/Cancel” button, kettle stop working, all indicator light off. The temperature display will be off in 20mins.

Memory

The kettle have memory function under keep warm mode.

Take the kettle from the base, and put it back. If the water temperature with the range of $\pm 5^{\circ}\text{C}$ of chosen temperature, Keep warm function still work.

Reminder: There is no memory function under cooking mode.

Fault

If there is no any indicator light or no digital showed on display when put the kettle on the base, it might be :

1. No water in the kettle.
2. Too much scale stocked which start up the dry boil function.

You can take the kettle from the base, cooling for several minutes and fill the kettle with cold water. Touch the ON/OFF again to start the kettle.

Cleaning

Always pull out the plug from the socket before cleaning!

The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.


Decalcification

- The frequency of the decalcify operation depends on the hardness of the water and on how often the appliance is used.
- If the machine switches off before the water boils, it probably needs to be decalcified.
- Please do not use vinegar but a commercially available decalcification agent on the basis of citric acid. Only use the quantities stated in the instructions.

Power supply: 220-240V~50/60Hz, 2520-3000W

If you have any questions, please contact our customer care centre.

Our contact details are below:

 0044-800-240-4004

 enquiries@mhstar.co.uk

IMPORTER ADDRESS:
MH STAR UK LTD
Unit 27, Perivale Park,
Horsenden lane South
Perivale, UB6 7RH
MADE IN CHINA

