

1. IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electrical shock, or injury to person:

1. The product is for household use only.

2. Connect the appliance to single-phase AC supply of the voltage specified on the rating plate.

3. In order to avoid overheating do not cover the heater.

4. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.

5. Extreme caution is necessary when any heater is used by or near children, invalids or elderly person and whenever the heater is left operating and unattended.

6. The heater must not be located immediately below an electrical Socket-outlet.
7. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
8. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.

9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

10. Avoid the use of an extension cord as this may overheat and cause a risk of fire. 11. Use the heater in a well-ventilated area. Do not insert or allow objects to enter any ventilation or exhaust opening. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only. 12. Do not place this heater near flammable materials, surfaces or substances, as there may be a risk of fire. Keep the above flammable materials, surfaces or substances at least 1m from the front of the product and keep them away from the sides and rear. 13. Do not use the heater in any areas where petrol, paint or other flammable liquids are stored e.g. Garages or workshops as a hot, arcing or sparking parts inside the heater.

14. Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool with floor standing mode. Never locate the heater where it may fall into bathtub or other water container.

15. Never touch the heater with wet hand. The heater should be installed so that can not be touched by a person using a bath or shower.

16. This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces.

17. Before moving the heater, please must unplugged it and let it cool down for 15 minutes. If provided, use handles when moving the product.

18. Be sure that no other appliances are in use on the same electrical circuit as your product as an overload can occur.


19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

20. Children should be supervised to ensure that they do not play with the appliance.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

2. Specifications

Model	Thermostat	Voltage	Power	IP rating
NDFL1202F-3	Mechanical	~230 V / 50 Hz	1500W	IPx4
NDFL1202F-4	Mechanical	~230 V / 50 Hz	2000W	IPx4

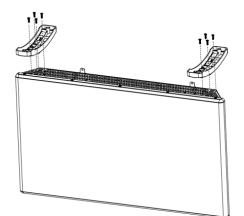

3. Assembly


For Stand

1-Fit the foot onto the bottom of the body.2-Fasten 2pcs foots with 8 screws (ST4*14).

	Parts list								
NO.	Description	Quantity	Note	NO.	Description	Quantity	Note		
1	Screw(ST4*14)	8	Used for Stand	2	foot	2	Used for Stand		
3	Instruction Manual	1	/	4	/	/	/		

4. Operation

Warning: Only operate the heater in normal upright position with foot attached to the bottom of the unit (foot on the bottom, controls on the top), any other position could lead into a hazardous situation.

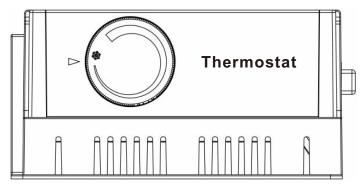

1. Set the power switch to off position and rotate the thermostat anticlockwise to minimum position. Then insert the plug into a socket-outlet with well grounded. 2. Press power switch on. Then rotate the thermostat clockwise to the position of MAX. When your room reaches the desired temperature, now slowly rotate the thermostat knob anticlockwise until the pilot light goes out. The thermostat can now be left at this setting. As soon as the room temperature has dropped below the set temperature, the unit will switch itself on automatically until the set temperature has been reached again. In this way the room temperature remains constant with the most economical use of electricity.

3. If you want to change the room temperature setting, rotate the thermostat knob clockwise to raise the temperature, or anticlockwise to lower it.

4. This heater includes an overheat protection system that shuts off the heater when parts of the heater are getting excessively hot.

5. To completely shut the heater off, do turn all the controls to OFF by manual, especially for OFF switch and remove plug from the socket-outlet.

5.Maintenance

1) For cleaning, always unplug the heater and leave it to cool.

2) Wipe the heater regularly with a damp cloth and dry the surface before turning on the heater again.

3) The heater must be cleaned at least once a month during the heating season.

CAUTION! The heater should never be immersed in water.

Avoid using detergents to clean the heater.

Never let any water get inside the heater; this can be hazardous.

4) Dust etc. should be removed with a soft cloth.

5) The heater can be stored in a dry and clean place.

6.Warranty

The warranty is valid for 1 years. The heater will be repaired or replaced during this time should any malfunction occur. The warranty applies if the heater is used according to these instructions and the customer can present a purchase receipt. If the heater malfunctions in any way, please contact the store where it was purchased or the importer.

7.Waste disposal



The symbol indicates that this product is not to be disposed of together with household waste. This product must be delivered to a recycling service or container for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Local businesses (or the environmental station in your neighborhood) are required by law to accept and recycle such products, as a means of environmentally sound disposal.

If you have any questions, please contact our customer care center. Our contact details are below:



0044-800-240-4004

🔀 enquiries@mhstar.co.uk

IMPORTER ADDRESS: MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH MADE IN CHINA