



## Manual of Instructions


**Rating: 220-240V~ 50Hz**

**Protection class: Class I**

**Rating Power: 100W**

**For: Floor Fan**

**Model: 824-014V70**

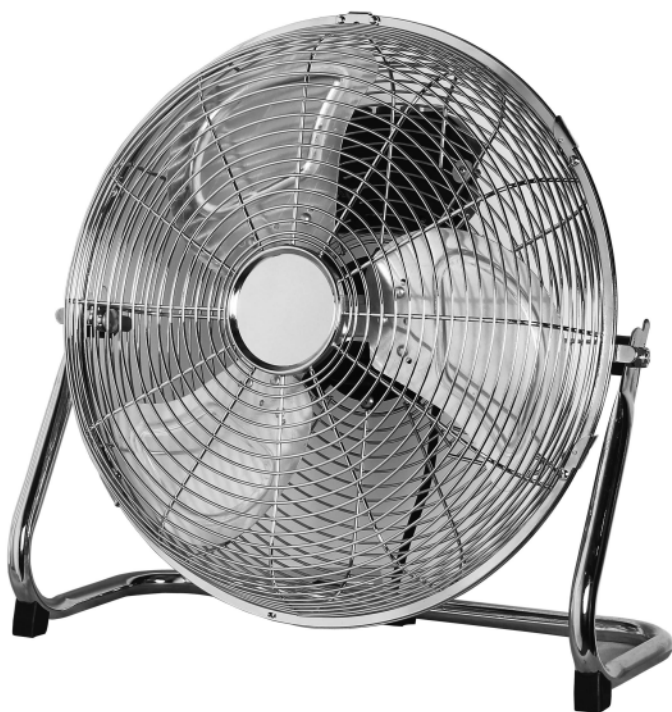

## **INSTRUCTION FOR USE**

Please read these Operating Instructions carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating Instructions must also be handed over.

**WARNING-**When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

## **SAFETY INFORMATION**

1. Incorrect operation and improper handling can lead to faults on the device and injuries to the user.
2. In the event of improper use or incorrect handling, no liability can be accepted for any damage that may occur.
3. Before you put the plug into the socket, please check that the type of current and mains voltage correspond to the instructions on the rating label on the underside of the appliance.
4. Do not immerse the unit or mains plug in water or other liquids. There is danger to life due to electric shock! However, if this should occur, remove the mains plug immediately and then have the unit checked by an expert before using it again.
5. Do not operate the device if the mains cable or the mains plug show signs of damage, if the device has fallen on the floor or has been otherwise damaged. In such cases take the device to a specialist for checking and repair, if necessary.
6. Never remove the mains plug from the socket by pulling on the mains cable, or with wet hands.
7. Ensure that the mains cable does not hang over sharp edges or allow it to become trapped.
8. Keep the appliance away from humidity, and protect from splashes.
9. Keep the appliance away from hot objects (e.g. hotplates) and open flames.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision of instruction concerning use of the appliance in a safe way and understand the hazards involved.

12. Children shall not play with the appliance.

13. Cleaning and user maintenance shall not be made by children without supervision.

14. Keep the appliance and its cord out of reach of children of less than 8 years.

15. The appliance should not be operated by means of an external timer – switch or by means of a separate system with remote control not originally belonging to this appliance.

16. Use the appliance on a flat, dry and heat resistant surface.

17. This appliance is intended to be used in households and similar applications.

18. Never leave the device unattended during use.

19. Do not store or operate the appliance in the open air.

20. Keep the appliance in a dry place, inaccessible to children (in its packaging).

21. Never put fingers or any other objects through the grilles (fan guards) when the fan is running.

22. The appliance must be assembled completely before use.

23. Watch out for long hair! It can be caught in the fan owing to the air turbulence.

24. Do not point the air flow to the people for a long time.

25. Ensure that the fan is switched off from the supply mains before removing the guard.

## 1 - ASSEMBLY OF YOUR FLOOR FAN

Your Floor Fan has been boxed assembled for immediate use.

## 2 - CARE AND CLEANING

Always disconnect electrical appliances before cleaning them.

Never spray with liquids or submerge the Box Fan in water or any other liquid.


To clean, wipe with a slightly damp sponge.

## 3 - OPERATION

Remove the packaging materials and unravel the cordset before operation.

### 3 Speed Fan

The 3 speed control switch allows you to choose a gentle breeze or full room air circulation. Push the button of 1 for a low speed setting, button of 2 for medium speed setting and button of 3 for a high speed. To switch Off, push the button of 0.

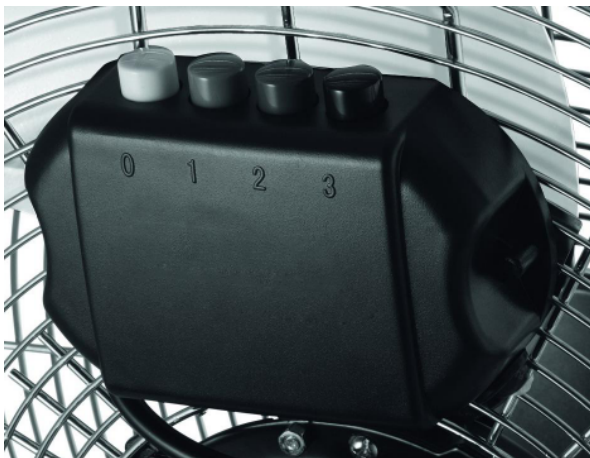

### Tilting function

The fan and motor assembly are attached to a 4-position ratchet. Tilt up or down until the assembly clicks into the desired position.

## 4 - CARE AND CLEANING

Always disconnect electrical appliances before cleaning them.

Never spray with liquids or submerge the Pedestal Fan in water or any other liquid.

The batteries after used should not be throwing away, it will be reclaimed.



0044-800-240-4004  
enquiries@mhstar.co.uk