


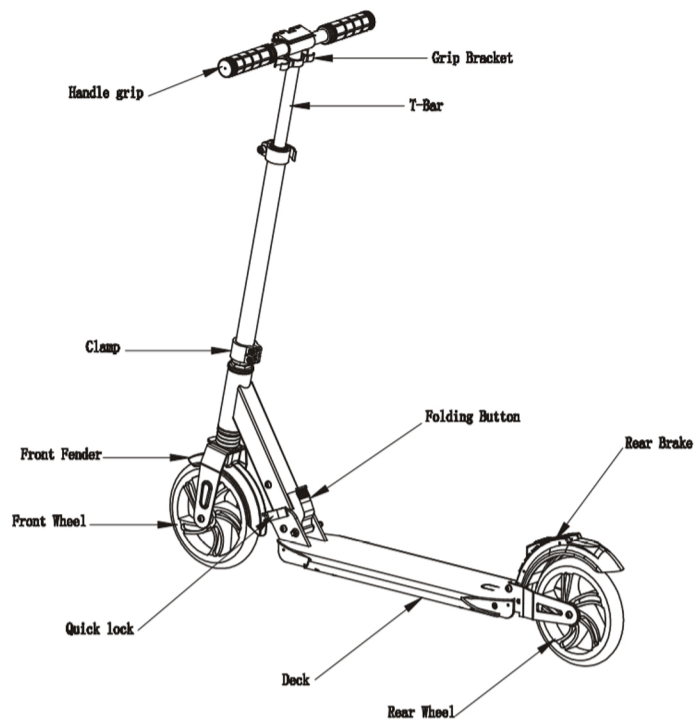



Please read this safety notice and assembly instructions before using this scooter. Please keep these instructions with the purchase receipt together somewhere safe for future reference. Before using this scooter, ensure that all parts are good before use.



Read the information supplied by the manufacturer










Wear personal protective equipment

-  Always wear suitable shoes and a protective helmet when riding this electronic scooter.
-  It is recommended to clean and dry this scooter and store away in its original packaging when not in use. Keep away from any corrosive materials.
-  This scooter is to be used by persons aged 14 years and above, weighing 100kg or less.
-  Aosom UK will not be held responsible, or made accountable, for any damage which is a result of usage outside what is specified in this documentation.



0044-800-240-4004  
enquiries@mhstar.co.uk

## Safety notes

-  This scooter does not adhere to any Road Traffic Licensing Regulations and cannot be used in traffic. You must obey all local traffic and scooter riding laws and regulations. Please ensure this scooter is used in areas without motor vehicles and away from stairs, steep ground and large masses of water and swimming pools. Do not perform any tricks, acrobatic performances, jumping stunt riding or anything of similar nature. Only use on dry, hard and level ground and with one rider present.
-  Regular and consistence maintenance enhances the safety of this scooter. When carrying out maintenance, ensure you check the self-locking nuts and other self-locking fixings, and change them if needs be. If required, change the wheels, but never make any modifications to this scooter.
-  The brake will become hot from continuous use. Do not touch after breaking as you may burn yourself.
-  Do not use this scooter during poor weather conditions, at evening or night or after consuming alcohol or drugs.
-  Do not use this E-Scooter at excessively high speeds, especially when going downhill.
-  Children must receive adult supervision when unfolding, adjusting the handlebar to the correct height and folding this E-Scooter.
-  Always inspect all parts and locking mechanisms before and after using scooter; if any parts appear to be broken, damaged or out of place, do not use this vehicle. Do not customise this scooter or use parts which are not supplied for

## Assembly Instruction

### I. Unfolding



Push the folding button and pull up the handlebar until it clicks. Release the handle from the grip bracket and insert it into the T-bar, ensuring the spring button pops to secure it into its position. To adjust the T-bar, release the upper lock and press the spring button. You are now able to adjust the T-bar handle to three different levels, dependant on the user's height. Make sure the spring pops back into its hole and tighten the upper lock to secure the T-bar.

### II. Folding



Loosen the upper lock, press the spring button and push down the T-bar to the lowest height. Tighten the upper lock to secure the T-bar. Press the spring button to release the handle from the T-bar and fix the handle on the grip bracket. Pull the folding button upwards and push the handlebar down until it clicks.

## Service

If you have any questions or problems please contact your dealership or contact us directly.