




**INSTRUCTION MANUAL**  
**Patio Heater**  
**(This heater for outdoor use only)**

**MODEL NO.:SHP-600B**

**ARTICAL NO.842-102/842-103**

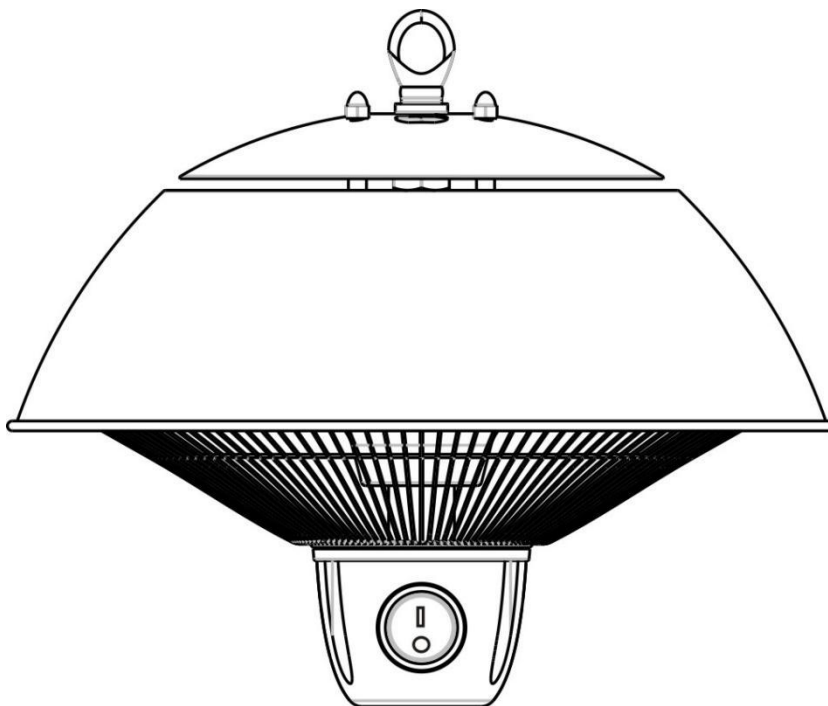

Thank you for purchasing your new heater.  
These operating instructions will help you use it properly and safely.  
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.  
Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## **Safety Warnings**

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read this Instruction Manual carefully to maximise this appliance's performance and keep for future reference.

- Always ensure that your power supply voltage matches this appliance's rating label.

- Never leave the appliance unattended while in operation. Always unplug the appliance when not in use.

- Warning: Never install the heater close to curtains and other combustible materials.

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

- Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given when children and vulnerable people are present.

- Always use the handle when moving the heater (if available) or hold on the sides if not available (make sure the unit is turned off). Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 1m from the heater.

- For safe use of the product, the product installation position should have a minimum height of 1.8 m from the ground, and a minimum distance of 0.5 m from ceiling, roof and both sides walls.

- The heater must not face with the heating element pointing upwards towards a ceiling. The heater element must be facing the area it is to heat.

- Warning: In order to avoid overheating do not cover the heater.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use the product if there are any visible signs of damage to the appliance.

- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. The unit does not contain any user serviceable parts. Only a qualified electrician should perform servicing or repairs. Attempting to repair the unit yourself will void your warranty.

- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

- Do not handle the element with bare hands. If it is inadvertently touched, remove finger marks with a soft cloth and methylated spirits or alcohol, otherwise the marks will burn into the element causing premature heater

failure.

- Do not replace or attempt to replace the element in this product.
- This product is suitable for outdoor use only. Do not operate the appliance in direct sunlight, near heat sources, humid environments or in places near water or other liquids such as bathrooms, shower or swimming pool.
- This product must not be left outdoors exposed to the elements for long periods of time.
- Do not operate with wet hands or spill water or other liquids on to the appliance the mains cable or plug.
- Do not run the power cable under carpeting. Do not cover the power cable with rugs, runner, or similar coverings. Arrange the power cable away from foot traffic and where it will not be tripped over.
- Do not wind the power cable around the unit.
- Do not insert or allow foreign objects to enter any ventilation or opening on the heater, as this may result in electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block the air vents.
- Do not use the appliance in areas where petrol, paints or other flammable substances are used or stored.
- Always position the appliance with the mains plug in an accessible position and avoid the use of an extension cables as they may overheat and create a potential fire risk.
- Always ensure the heater is plugged into a suitable socket, one that is tested for outdoor use.
- To disconnect heater, turn controls to OFF, then remove plug from socket. Do not unplug by pulling on the power cable.
- Always unplug the unit and ensure the unit is completely cold before moving, cleaning or storing.
- This heater is intended for domestic use only and should not be used commercially for contract purposes. Any alternative use, not recommended by the manufacturer, may result in fire, electric shock, or injury to persons.
- The use of attachments on the heater is not recommended.
- Warning: This heater does not equipped with a device to control the room temperature. Do not use this heater in small rooms when occupied by persons not capable of leaving a room on their own, unless constant supervision is provided.
- Check exterior walls for areas of damage before installing the heater.
- Check exterior walls for communication and electrical cables and pipelines.
- Should any service lines be present in the immediate vicinity do not install your heater, find an alternative location to install this product.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- The heater must not be located immediately below a socket-outlet.
- Children of less than 3 years should be kept away unless continuously


supervised.

- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

-Regarding cleaning of the reflector, please refer to the relevant paragraph given below.

-Means for disconnection from the supply mains having a contact separation in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.

## Usage

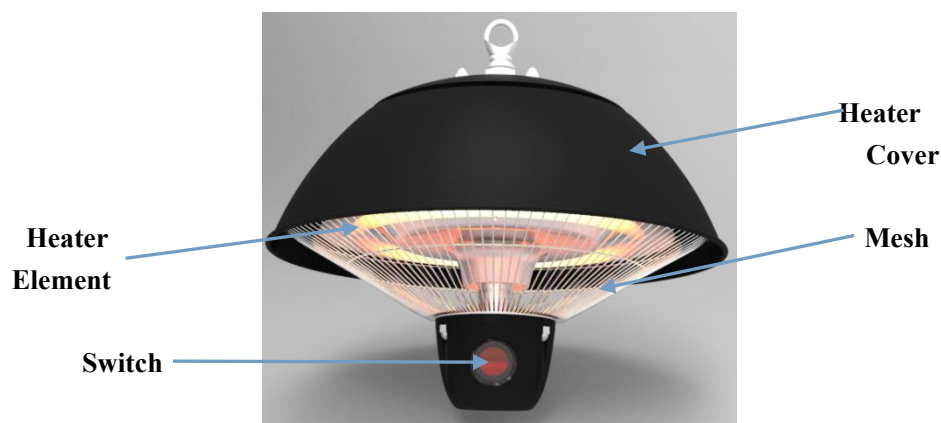

1. Attach this heater to a suitable ceiling. The appliance must hang at least 1.8m from the floor and a minimum distance of 0.5m from the ceiling.
2. Make sure that the hook is able to undertake a weight 3 or 4 times that of the Patio Heater itself.
3. These appliances must be supplied with proper voltage and frequency (AC220-240V,50,/60Hz), and connected to an individual, properly grounded branch circuit,protected by a circuit breaker which in accordance with wiring rules. The power cable of this appliance must be fastened with the chain, installation can only be carried out by qualified person in order to avoid a hazard.
4. Power levels can be set by pulling on the power switch:  
0-level 1-level(600W)

## Maintenance and Cleaning

### Maintenance

Attention! Careful and regular maintenance of Infrared Heater is required to attain a long and efficient operation of your appliance.

- 1- Check the cleanliness of the Reflector and IR-Filament at least once a month. If necessary, apply cleaning and maintenance instructions.
- 2- The number of checks may be increased considering the amount of dust in the environment.
- 3- Check the deformation of the Reflector, Wire and Frame visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 4- Check the power cable and plug visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 5- It is recommended to change the reflector every 2 years for more efficient operation.

### Cleaning

Attention! Regular and careful cleaning helps your heater to operate efficiently for many years.

- 1- Unplug your power cable for your safety before cleaning your appliance.
- 2- Take out the front grid wire through the inlets on the frame using a slotted screwdriver.
- 3- The reflector and filament must be cleaned with a soft cloth, a smooth brush or cool or dry air. The cloth may be damp but never too wet and the cleaner should not include any chemicals.
- 4- Refrain from using cleaning materials likely to damage the reflector (cleanser etc.).
- 5-Reinsert the wire grid using a slotted screwdriver.

### Specifications

Voltage	AC220-240V
Frequency	50/60Hz
Electric Power	600W



The symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.

There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.