





Technical specifications

Model:	B71-039 JL-SH01
Dimensions (WxLxH)	995 x 495 x 780 mm (mounted) 995 x 100 x 65 mm (folded)
Load capacity (per pc.)	125 kg (max.)

Explanation of the Symbols

The following symbols and signal words are used in this manual on the easel or on the packaging.

	WAARSCHUWING! Indicates a hazard which, if not avoided, could result in death or serious injury.
	Read the manual.
	Do not place a heavy load on the easel. Respect the tax specifications.
	It is forbidden to sit on the easel.
	Climbing on the easel is prohibited.
	Maximum load capacity: 125 kg

General

Read and save the manual

This folding easel is exclusively intended for use in a private environment and in the leisure and DIY sector with the aim of placing them under rooms. Read, understand and follow the safety, mounting and operating instructions in these manuals. Violations can result in personal injury and property damage.

The manufacturer is not responsible for damage caused by improper use of this folding easel.

Safety instructions

- Make sure the bridge is not damaged before using it. The bridge should not be used with a damaged safety or adjusting device or with a damaged weld seam.
- Use the foldable easel only on a firm, level surface.
- Make sure the safety brackets and pins are properly snapped or locked.
- Do not place a load that protrudes laterally from it.
- The easel is not suitable as a stepladder/stand.
- Never overload the easel. Compare the weight of the load with the authorized load capacity.
- Make sure your fingers do not get caught in the folding system when installing the easel.
- The easel can only be loaded during work and not permanently.

Assembly

- Place the folded easel with the support surface down on a flat surface. (Fig.1)
- Turn the supports on each side upwards to the vertical position. (Fig.2)
- Push the supports sideways outwards. (Fig.3)
- Make sure the brackets are behind the metal connectors. (Fig.4)
- Hook the locking rod into the mounting bolts. (Fig.5)
- Adjust the right easel. (Fig.6)
- Repeat the procedure for the second pair of supports.
- To reduce the easel, perform these steps in reverse order.

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it