



Electric Ride-On



CAUTION:

- .This package contains small parts which are for adult assembly only.
- .Remove all plastic bags & tires before giving this toy to a child.
- .Protective equipment should be worn, not to be used in traffic.
- .Keep this instructions for future reference.



WARNING

**ADULT ASSEMBLY
REQUEST.**




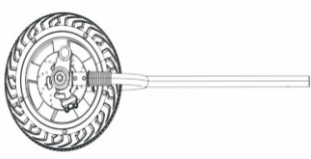



 





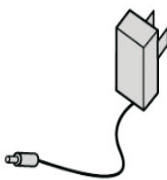
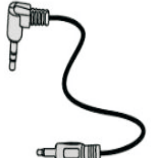
Vespa.® is a registered trademark owned by Piaggio & C.S.p.A.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

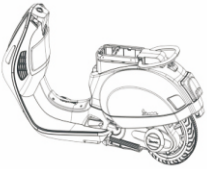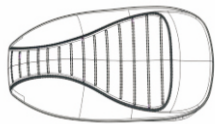
ASSEMBLY INSTRUCTION

Suitable Ages	3-6 Years
Product Dimensions	102X50.5X75.5cm
Maximum Weight	25 kgs
Speed	2-3 km/h
Motor	30W
Charger	Input: AC 220V/110V
	Output:DC6V/500mA
Battery	6V4.5AH
Operating Ambient Temperature	0 - 40 °C




II . Components List

1、 Motorcycle body 1pc 	2、 Seat 1pc 	3、 Handle bar 1pc 
4、 Front wheel 1pc 	5、 Side wheel 1pcs 	6、 Rear-view mirror 2pcs 
7、 Front fender 1pc 	8、 Rear fender 1pc 	9、 Φ 4X14 Screw 5pcs 
10、 Φ 4X24 Screw 2pcs 	11、 M5X28 Bolt 1pc 	12、 M5X40 Bolt 1pc 
13、 Nut 1pc 	15、 Charger 1pc 	14、 MP3 connecting wire 1pc 


III. Assembly Instructions

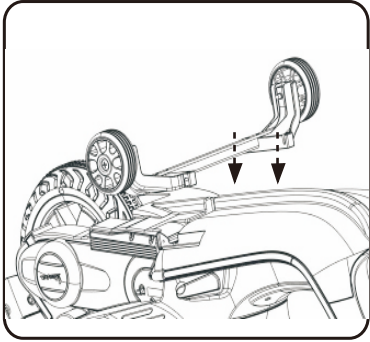


1、Place the side wheel over the location in the bottom of motorcycle body,tighten by six screws with a screwdriver(not included).

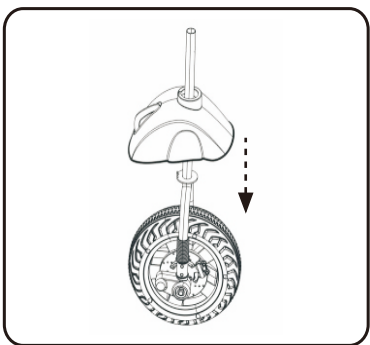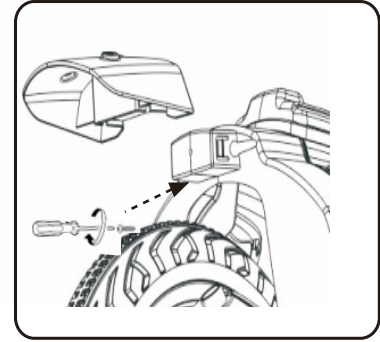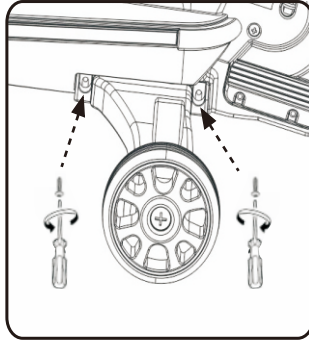


3、Insert the front wheel stick through the front fender.

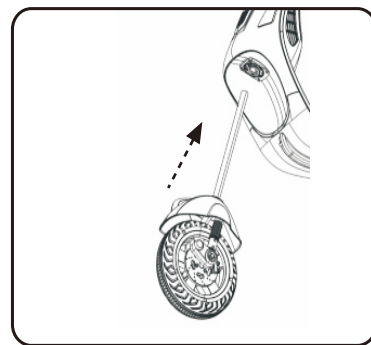


4、Insert the front wheel stick into the hole of the motorcycle body.

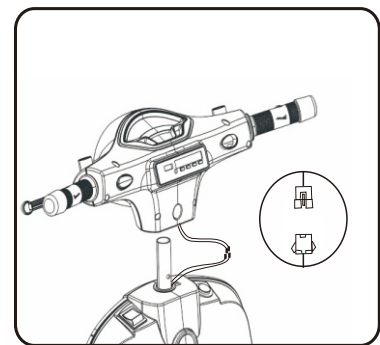


5、Connect the wire plug of the handle bar into the wire plug of the motorcycle body,then insert the whole plug into the hole.

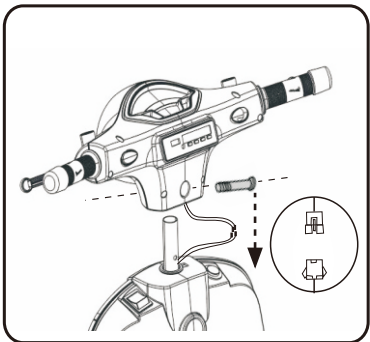


6、Place the hande bar over the front wheel stick,insert the bolt into the hole and tighten by a screwdriver.

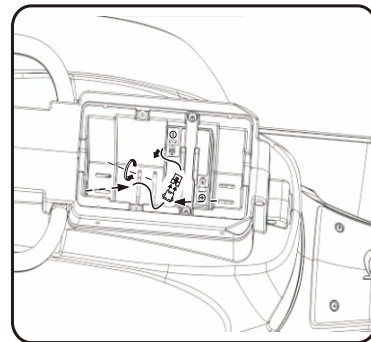

7、When the baterry is installed, insert the red cable terminal into the baterry positive pole.

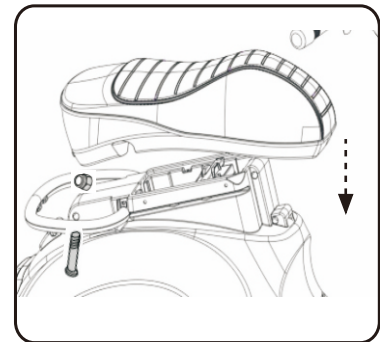


8、Place the seat into the location in the motorcycle body,then insert the bolt into the hole and tighten the nut.

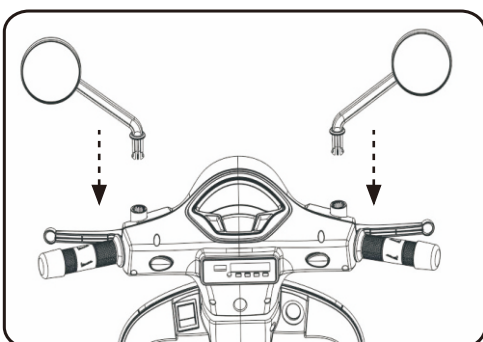

9、Insert the rear-view mirror into the hole of the handle bar,be certain the rear-view mirrors are completely fixed.

V. Function and Operation

1. Dash board

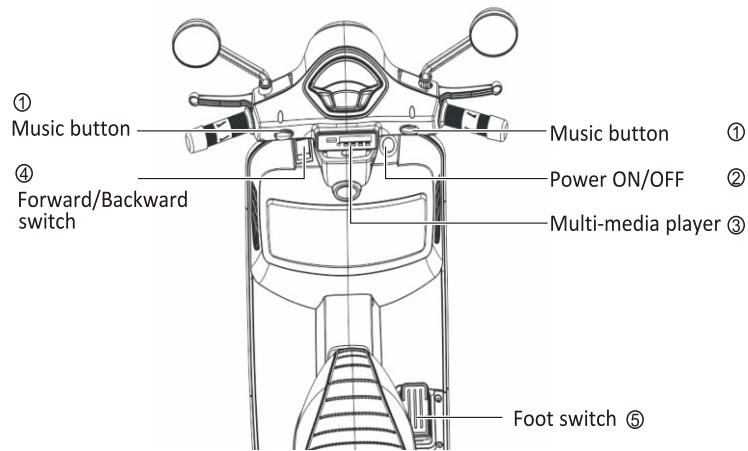

*Story/V-: Mode of Story/V-
Pressing slightly and it will be prior music or broadcast channel.
Pressing for a longer time and it will lower the volume.


*Music/V+: Mode of Music/V+
Pressing slightly and it will be next music or broadcast channel.
Pressing for a longer time and it will higher the volume.

*Song/XX: Mode of Songs
Pressing longer and it will search broadcasting station automatically.

*Education: Earlier education.
Mode: SD Card, MP3, USB connector
Speaker: Horns of cars

VI. Battery and Charger Operating Guide

1. The charging socket is located at the left side of the motorcycle.
2. The battery and charger which are provided or recommended can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out only by adults but not children.
5. The battery shall be fully charged before first use; the battery charging time shall be 9-10 hours and can not exceed 15 hours.
6. The lukewarm phenomenon of the charger and battery will occur during charging.

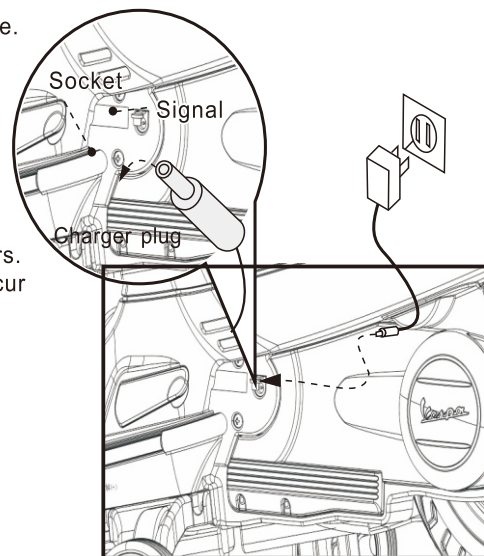

VII. Simple Fault Removal Guidance

Defective conditions	Key points of inspection
1. The ride-on not be driven.	1) Check the power switch, all plugs of the control plate under the seat, and the battery terminal line are properly inserted.
	2) Check the over current protector, when the car is over loaded or blocked, the over current protector automatically disconnects the circuit to protect the motor and controlling IC board.
	3) Check whether the car has been stored for a long time and its battery is not charged on time.
	4) If the remote control cannot start the car, please check whether the remote control code-matching function is normally operated.
	5) Check whether the remote control battery power is low.
2. Music sound is distorted or silent	Check whether the battery has enough power, otherwise charge fully.

VIII. WARNING

1. Battery warning:

- 1) If the product is not used for a long time, please fully charge the battery and then turn off the power switch for storing the car. The battery shall be recharged once every other month, otherwise the battery service life will be shortened or the battery cannot be charged again.
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).

2. Product warning:

- 1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
- 2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
- 3) The children shall correctly use the car under the adult guidance and supervision, otherwise they may make themselves or the others injured.
- 4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in such dangerous places as street, road, steep slope and beside swimming pool, otherwise the traffic and drowning accidents may occur.
- 5) Please put on shoes and protection equipment before use, such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.
- 6) Small parts possibly fall off when this product is used improperly. So, it is unsuitable for children under 36 months old.
- 7) Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.
- 8) This product is only allowed to be used by a child; the maximum load is 30kg, and therefore the overload is not allowed.
- 9) Keep away from fire.
- 10) The product instructions shall be kept as they contain important information.

3. WARNING:



WARNING

To reduce the risk of injury, adult supervision is required.

Strictly forbidden using on the roadways, near motor vehicles, slopes, swimming pools and where there is water;

Please wear shoes; this toy car can only be used simultaneously by one person.

Keep away from kids before assembled by adult, as there are potentially sharp edges, points, or small parts.



WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.



WARNING

Protective equipment should be worn. Not to be used in traffic.



WARNING

This product is unsuitable for children under 3 years due to its maximum speed.

IX. Care and Maintenance

- 1) Regularly wipe and clean it with a piece of cloth.
- 2) The rotating parts of the car should be checked regularly to determine whether any foreign matter obstructs the rotation and to keep lubricating state of normal operation.

Model identifie	HK050V-060050	
Input voltage	100-240	V
Input AC frequency	50/60	Hz
Output voltage	6	V
Output current	0.5	A
Output power	3	W
Average active efficiency	78.38	%
Efficiency at low load (10 %)	66	%
No-load power consumption	0.09	W
MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH		

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it