

Kids Scooter



Product Blame : Kids Scooter
Product Model : Z-017
Suitable Age : 3⁺ years old



Thank you for choosing our product, please read the user manual carefully before riding , This manual aims at helping you to assemble, use and maintain the scooter, it's very important to understand the safety warnings and matters need attention of driving.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY







ASSEMBLY INSTRUCTION



SAFETY WARNING

1. The adult must assemble this product fully and make sure every part is steady before giving it to children, and the adult should discard the package such as paper, plastic bag to avoid children which caused by eating the package.
2. This product is designed children for 3+ years old, its max carrying capacity is 50KG.
3. The child must use this product under supervision of adult, he can never use it alone.
4. Only one user can play this product by one time.
5. You can never change any part of the product, or it will cause damage.
6. Please check every junction part, and make sure they are all tight before using.
7. Please check every screw, and make sure they are all tight before use.
8. The child should wear protective clothing such as helmet, gloves, kneepad, the child can never drive the scooter with sandal shoes or bared feet.
9. The scooter can't be used in dangerous places such as slope, pot hole or wet area.
10. The scooter can't be used on the street, market, stairs, elevator, or any place near the windows or doors.
11. In order to avoid damage, the scooter can't be used near fire or heat machines.
12. Please use the scooter where is safe and permitted by lawn.
13. Don't use scooter when it's dark or at night.
14. You can't use bike or car or any other vehicle to drag the scooter.
15. You should learn some skill to avoid falling over.
16. You must charge the battery before you use the scooter at the first time, or the system can't work.
17. You should charge for more than 5 hours before the first using.
18. Please turn off the power when you don't use the scooter.
19. Please don't change or move any part of the scooter which is not allowed to move.
20. Never use or put the scooter in the water, it will damage the battery and system.
21. Please read this manual carefully before using.
- 22. If you don't use it for a long time, please keep it charged every two months.**
- 23. please don't disassemble the battery, once the battery is removed, the manufacturer is not guaranteed.**

1. Installation

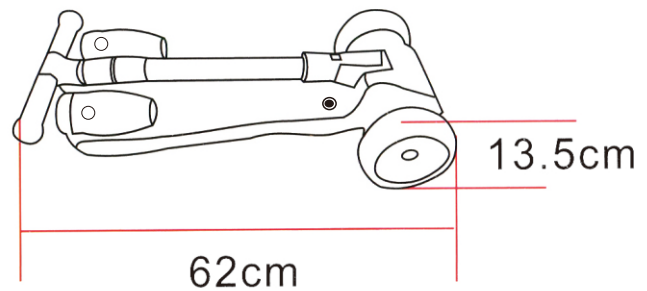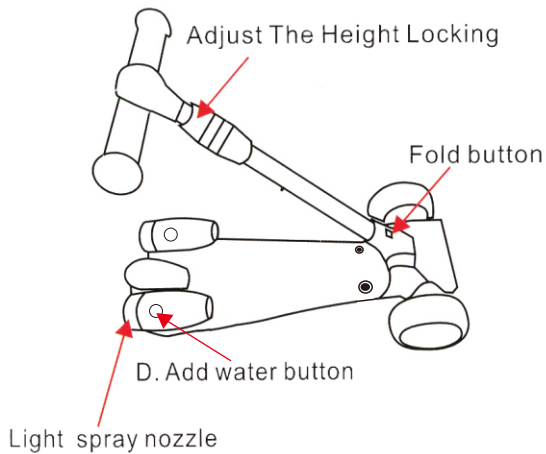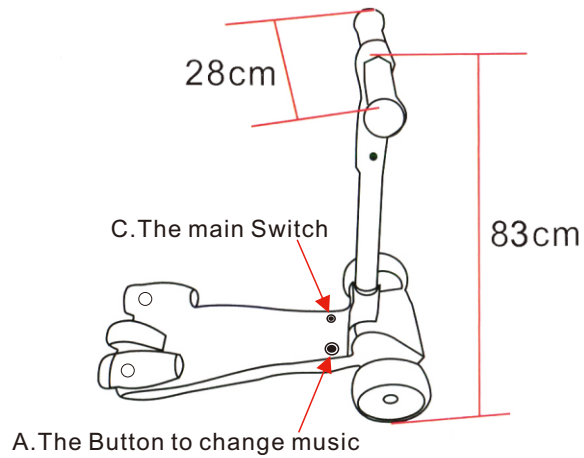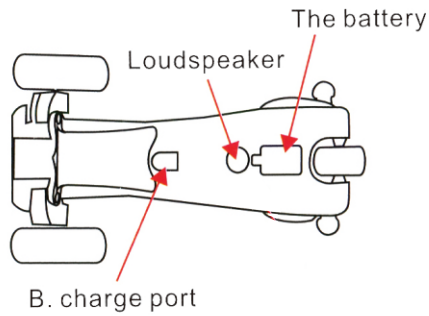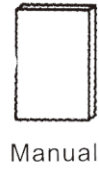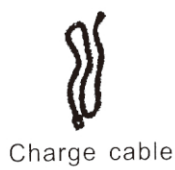

2. Instructions for use

A. The Button to change music

B. charge port

C. The main Switch

D. Add water button

(1) Charge

Put the round side of charge cable into "B" charge port, and put the USB side into computer /USB charger.

(2) Add water

Press "D" add water button, and pour water into the tank until the engine is full, then you can loosen the button.

(3) Install battery

Pay attention to the "+", "-" direction of the battery and install the battery to battery box correctly, then install the box cover and screw.

(4) When you install the battery at the first time, the battery is at the stage of electric circuit protection, you need to charge the battery before using.

(5) Push "C" main switch , then push "A" start button and LED signal light, two engines begin to spary and shine, and the front light of the scooter will keep shining , you can also hear sound from the loudspeaker . After a while, the engines will stop, you can push "A" start button to make them work again .

If you push "C" when the engines are working, they will stop.

(6) If you want to add water to the engine or assmble the engine into the scooter, you must turn off the "C" main switch first.

(7) If the battery was no electricity, the engine won't work, you need to charge right now.

(8) When you fold the scooter, press down the fold button and pull the handle out , When you hear a sound of CLICK, and the fold button is out, it is folded. When you unfold the scooter, press down the fold button and pull the handle out, then push the handle down hard, When you hear a sound of CLICK and the fold button is out, the scooter is fully opened.

3. Maintenance:

1. If you push "C" main switch and "A" start button and LED signal light , but the engines and front light still don't work, you need to check:

(1). Have you installed the battery? If not, please install the battery at the right position.

(2). If you have installed the battery correctly , please charge for a moment to see if it can work or not.

2. If the engine was shining but not spary, you need to add water for engine .

3. If the engine don't spary or spary a little after several months, maybe some accessories are broken, you need to change them .

4. The working time of battery will become shorter after a long-term using, when you find the charging time become less or the working time of engine become shorter, you should change the battery.

5. Check the tires timely, and add gear oil, check if there is any ropes or trash, you must change the tire immediately if it is broken .

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it