

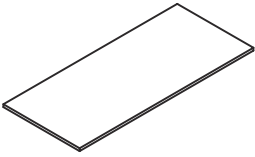
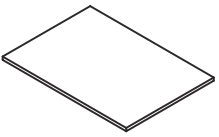




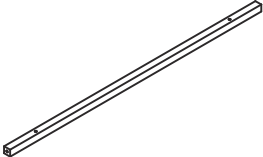
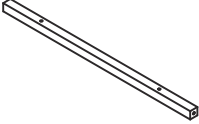
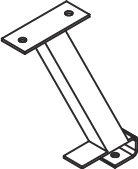









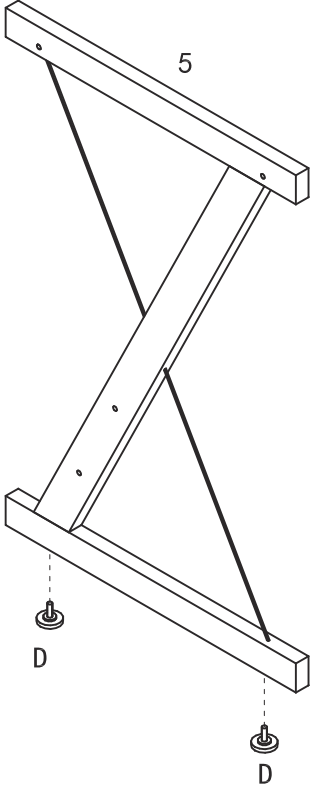
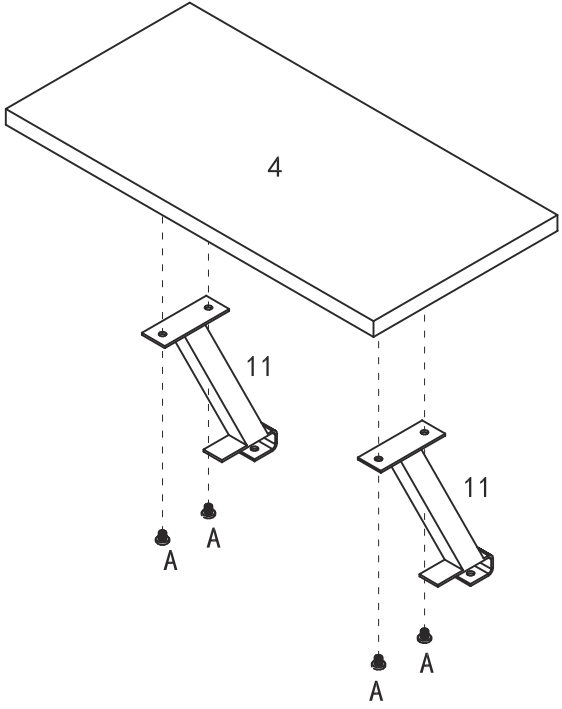



# Assembling Instruction

Attention: Do not tighten the screws until all of them are in right positions

1  X1	2  X1	3  X1	4  X1	5  X4
6  X1	7  X1	8  X1	9  X2	10  X2
11  X2	12  X1	A  M6X10 X4 B  M6X35 X24		C  M6X60 X4 D  M6 X10 E  M4X12 X4 F  X4  


1  <b>X4</b> D X8	2  A X4
---	---

3

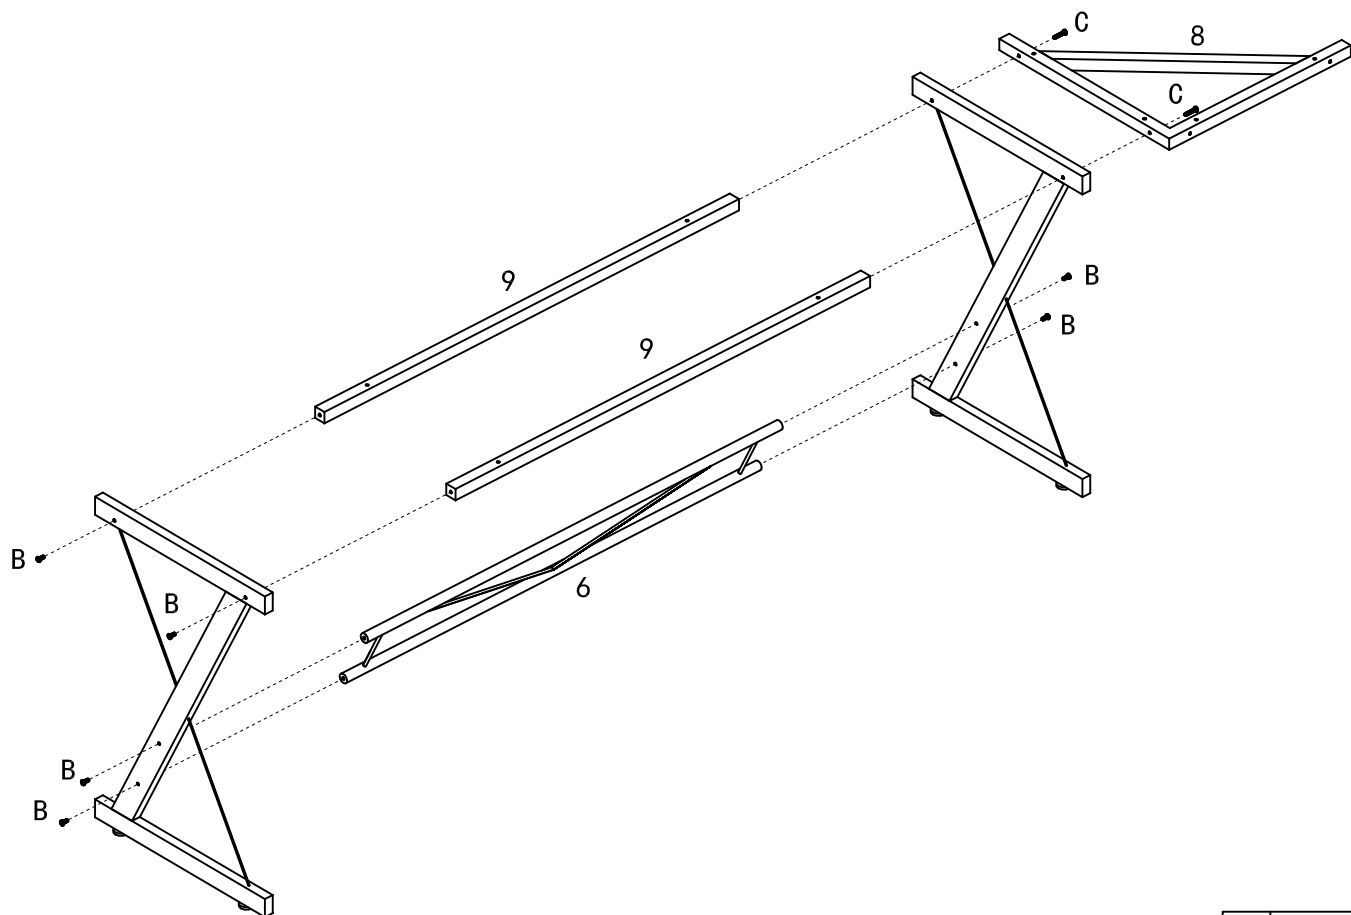


B	X6
C	X2

4

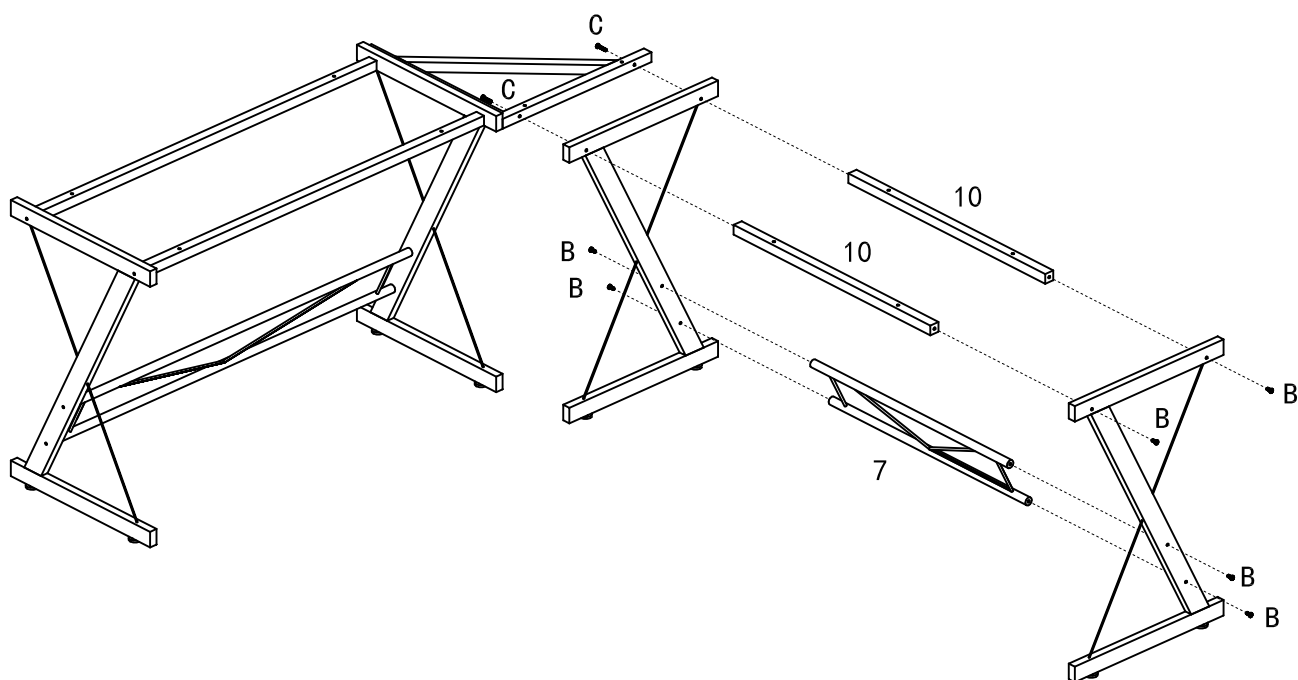


B	X6
C	X2

5

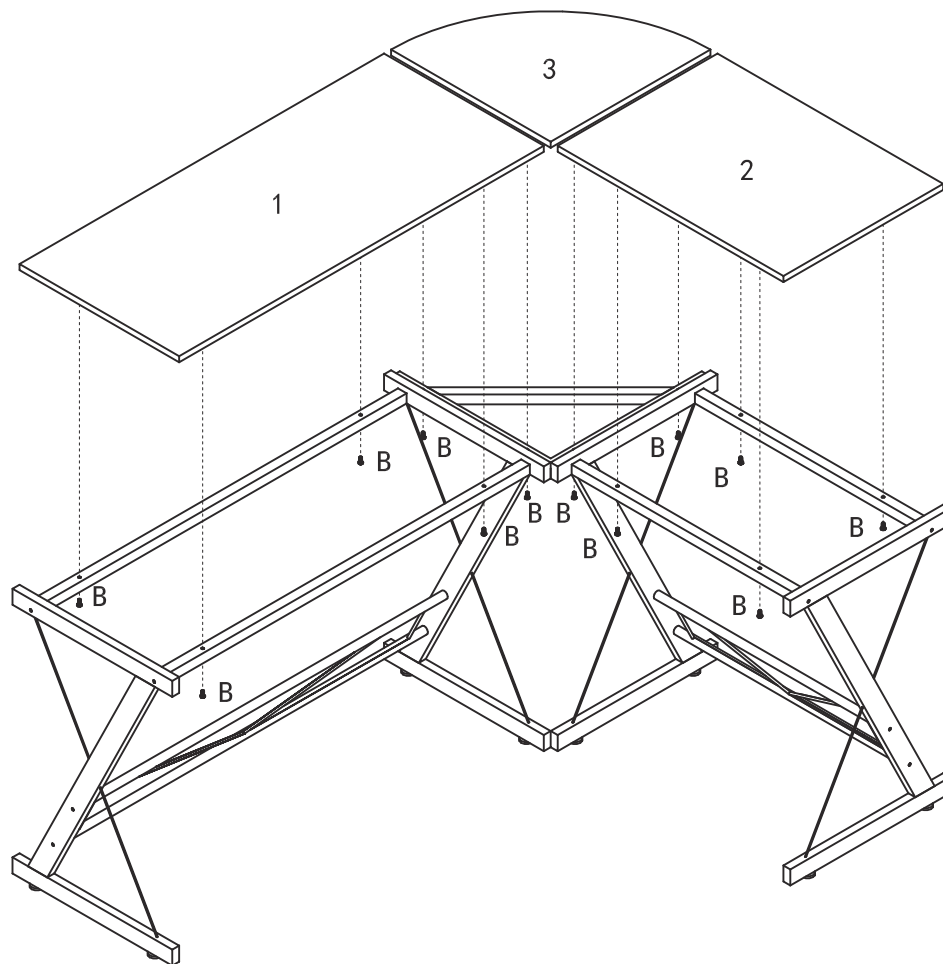


B X12

6

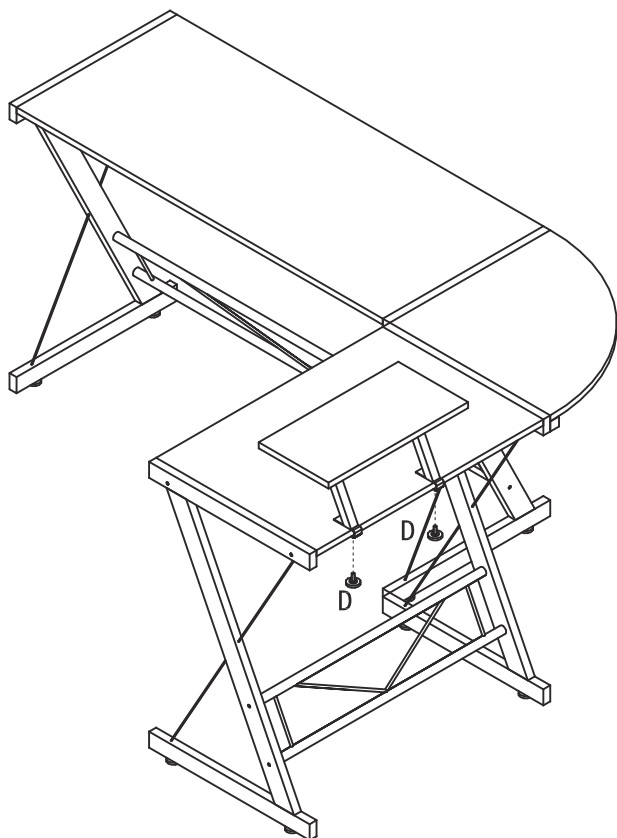

D X2

7

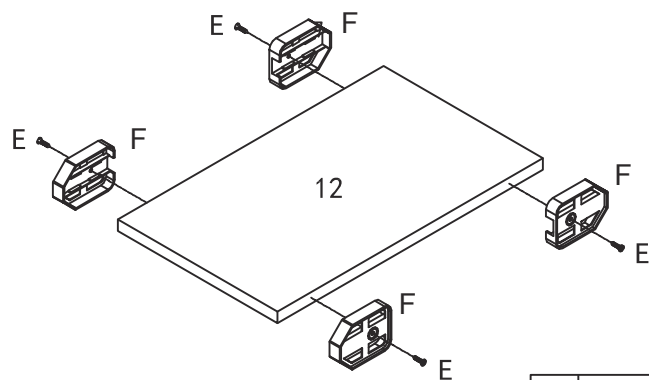

E X12

