



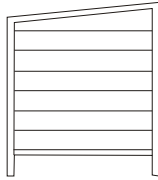
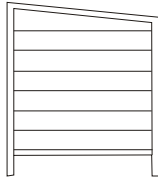
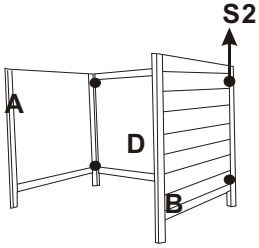
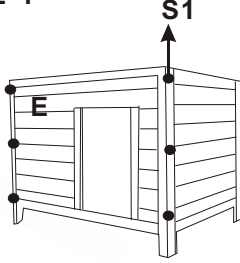
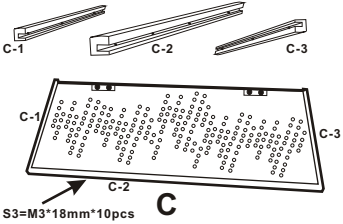

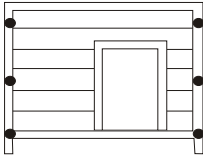
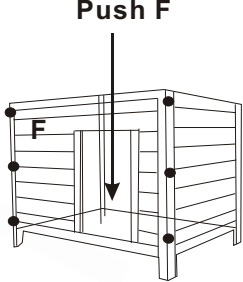
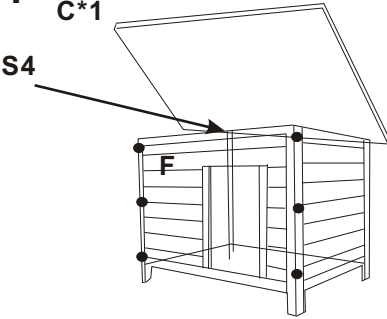
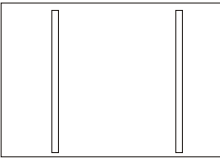


Assembly instruction

PAWHUT
Item No: D02-014

<p>S1  30mm 6pcs S2  25mm 4pcs S3  18mm 10pcs S4  10mm 6pcs</p> <p>Screw detail</p>	 <p>A= left wall</p>	 <p>B= right wall</p>	<p>1 S2*4pcs A*1;B*1;D*1</p> 	<p>2 S1*6pcs E*1</p> 
 <p>C= rainproof roof</p>	 <p>D= back wall</p>	 <p>E= front frame</p>	<p>3 F*1</p> <p>Push F</p> 	<p>4 S4*6pcs C*1</p> 
 <p>F= floor</p>				
		<p>SOFTLY REMIND Make sure screws are accurately inserted. Avoid the points of nails sticking into the living space of your pet; they could cause injury.</p>	<p>SOFTLY REMIND Fir&plywoode sections may twist when unassembled, if you happen to meet this problem do two steps as follow: 1.find out which surface is curved. 2.put the curved face down-ward the floor for a shart time under the sunshine (if no sunshine,thime should meed little more). 3.then you can find the fir&plywoode revert to level.</p>	