


# PawHut

Indbb078\_GL


**D06-117**

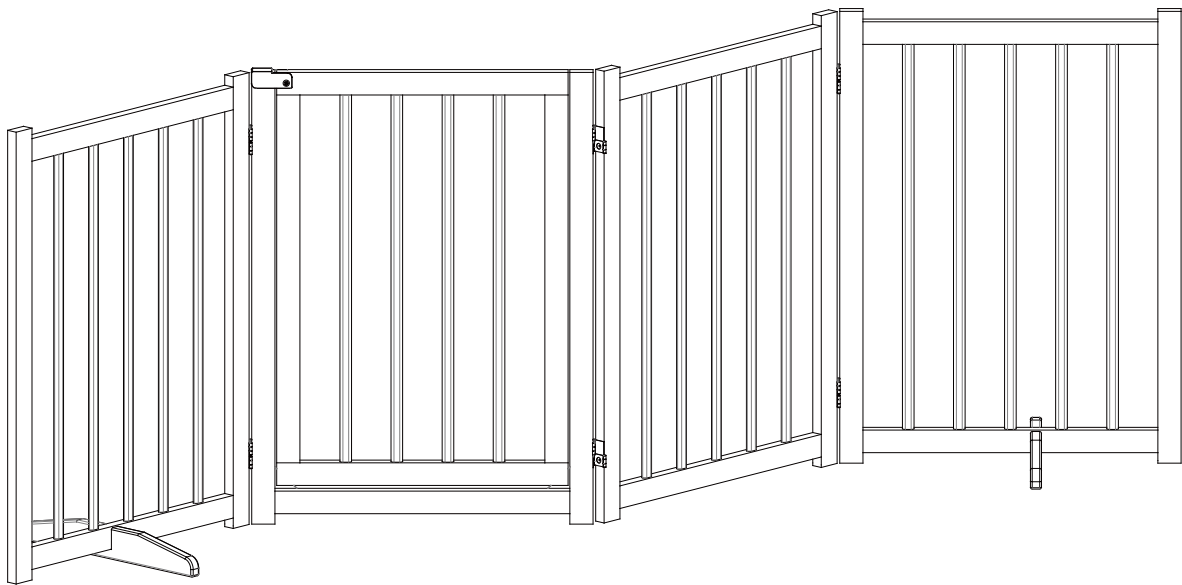


**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

## ASSEMBLY & INSTRUCTION MANUAL


1 x02

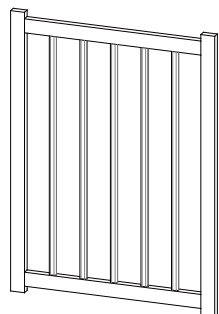


2 x01

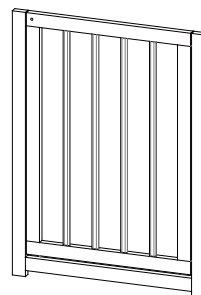


3 x01

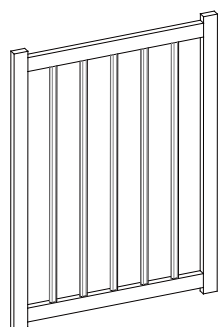


4 x02

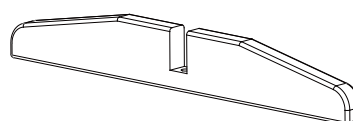


A x01

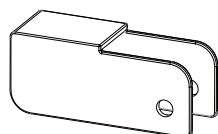


B x03  
M6.0\*32




C x01

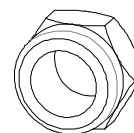


D x02

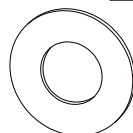


E x06



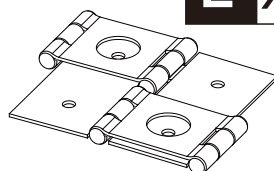


F x24  
M3.0\*16  
+2(spare)








G x01




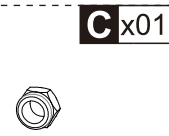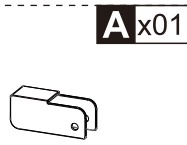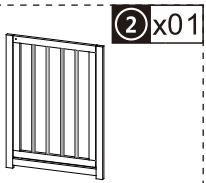


M6.0\*32

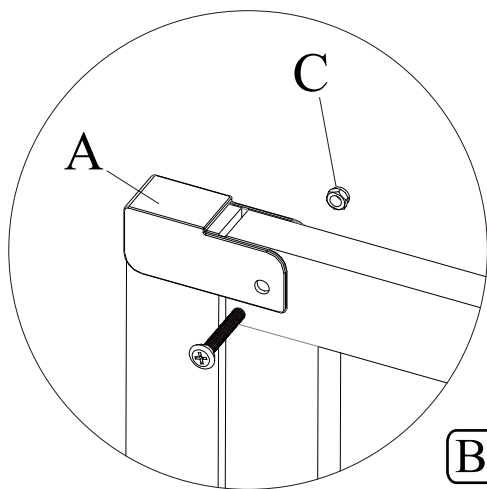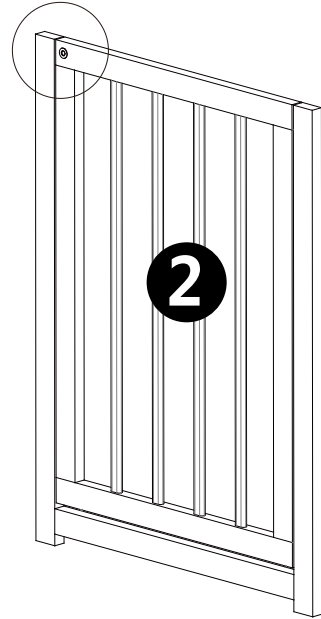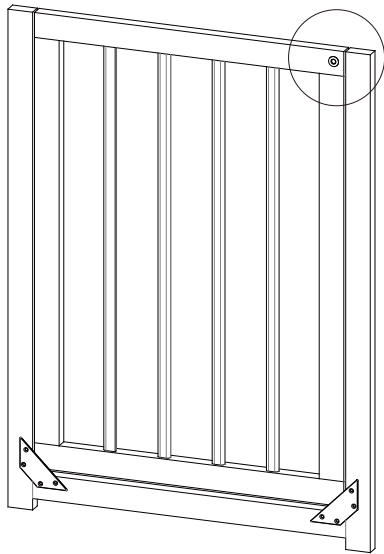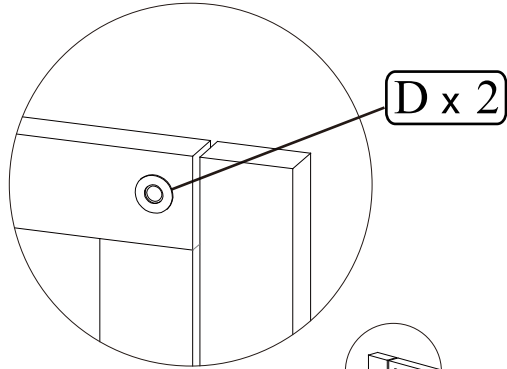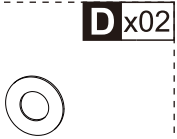


**B** x 1

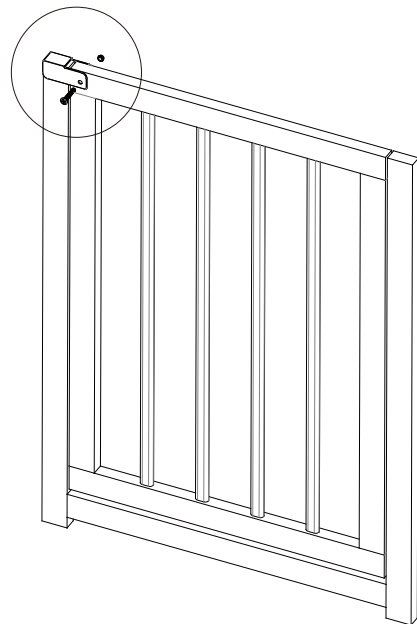


① x02




② x01




③ x01




E x06





F x24




M3.0x16

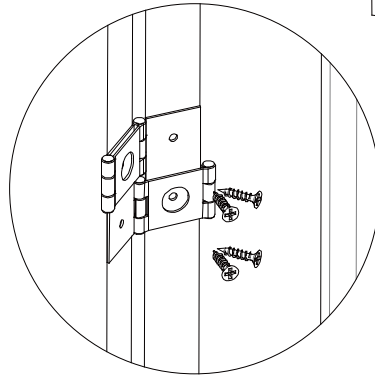

F x 24

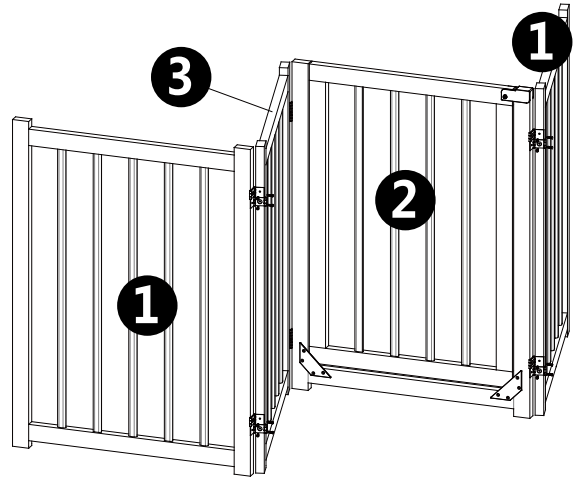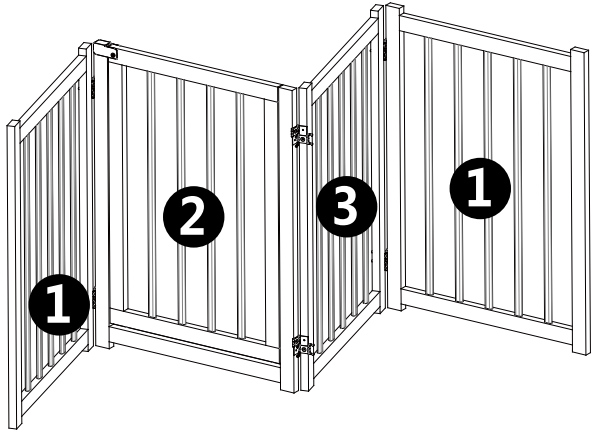


④ x02



B x02



M6.0\*32

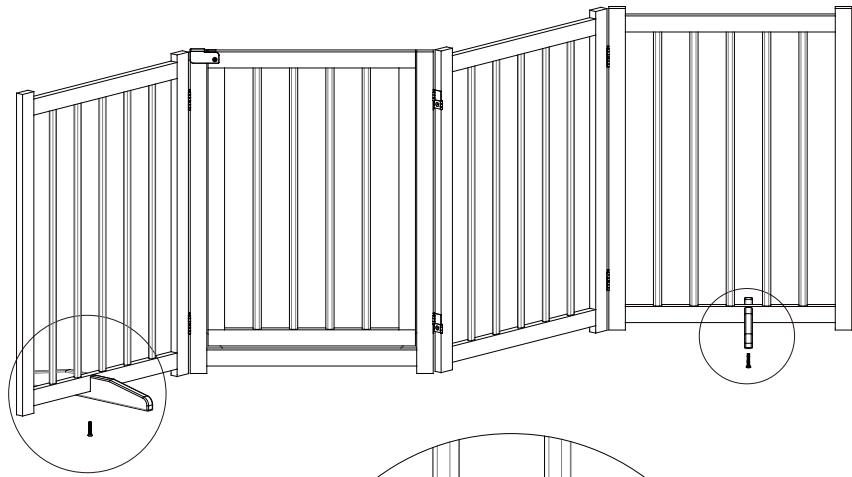

B x 2

